




Air Screwdriver Item No : RA-606 RA-616

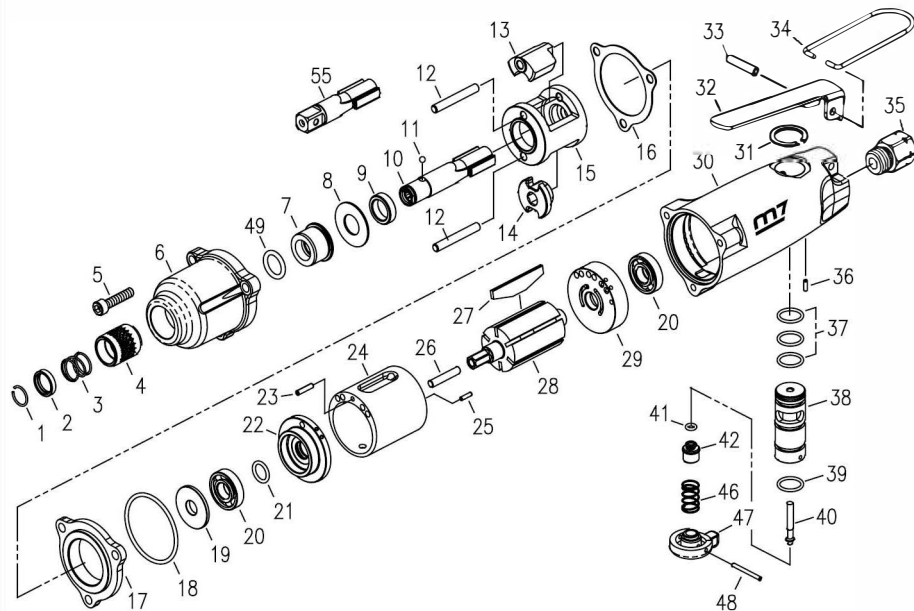

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



Part List RA-606 RA-616

	NO.	INDEX NO.	DESCRIPTION	Q'TY
▲	1	RA-606P01	Retaining Ring (For RA-606 Only)	1
▲	2	RA-606P02	Retaining Washer (For RA-606 Only)	1
▲	3	RA-606P03	Chuck Sleeve Spring (For RA-606 Only)	1
▲	4	RA-606P04	Chuck Sleeve (For RA-606 Only)	1
★	5	RA-606T05	Cap Bolt (3pcs)	1set
★	6	RA-606T06	Hammer Case Assembly (06.07.49)	1set
★	7	-	Anvil Bushing	1
★	8	RA-606P08	Anvil Spacer	1
★	9	RA-606P09	Bushing	1
●	10	RA-606P10A	1/4" Hex. Anvil (For RA-606 Only)	1
●	11	RA-606P11	Steel Ball (For RA-606 Only)	1
●	12	RA-606T12	Hammer Pin (2pcs)	1set
●	13	RA-606T13	Hammer Dog (2pcs)	1set
▲	14	RA-606P14	Cam	1
▲	15	RA-606P15	Hammer Cage	1
●	16	RA-606P16	Gasket	1
★	17	RA-606P17	Hammer Case Bushing	1
●	18	RA-606P18	O-Ring	1
★	19	RA-606P19	Spacer	1
▲	20	RA-606T20	Ball Bearing (2pcs)	1set
★	21	RA-606P21	O-Ring	1
★	22	RA-606P22	Front Plate	1
★	23	-	Spring Pin	1

	NO.	INDEX NO.	DESCRIPTION	Q'TY
★	24	RA-606T24	Cylinder Assembly (23.24.25)	1set
★	25	-	Spring Pin	1
●	26	RA-606P26	Pin	1
●	27	RA-606T27	Rotor Blade (6pcs)	1set
★	28	RA-606P28	Rotor	1
★	29	RA-606P29	End Plate	1
★	30	RA-606P30	Motor Housing Assembly (30.36)	1set
★	31	RA-606P31	Retaining Ring	1
★	32	RA-606P32	Throttle Lever	1
★	33	RA-606P33	Spring Pin	1
★	34	RA-606P34	Hanger	1
★	35	RA-606P35	Inlet Bushing	1
★	36	-	Spring Pin	1
●	37	RA-606T37	O-Ring (3pcs)	1set
★	38	RA-606P38	Reverse Bushing	1
●	39	RA-606P39	O-Ring	1
★	40	RA-606P40	Valve Tappet	1
●	41	RA-606P41	O-Ring	1
★	42	RA-606P42	Valve Stem Set	1
▲	46	RA-606P46	Valve Spring	1
★	47	RA-606P47	Reverse Lever	1
★	48	RA-606P48	Spring Pin	1
★	49	-	O-Ring	1
●	55	RA-616P55	3/8" Sq. Anvil (For RA-616 Only)	1