



PARTS LIST


Model: DP1520B , DP1520F

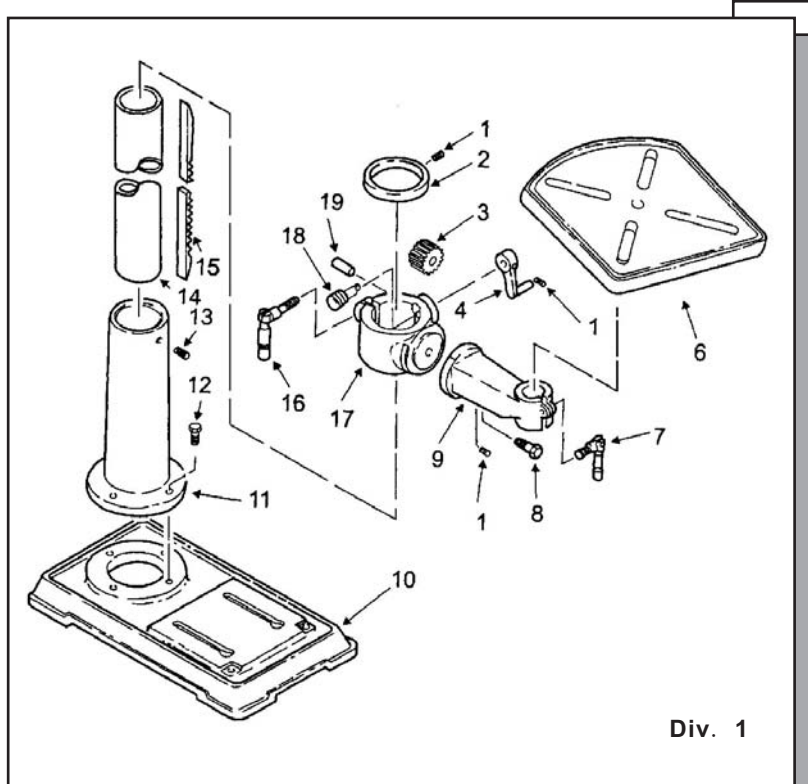

Div. 1

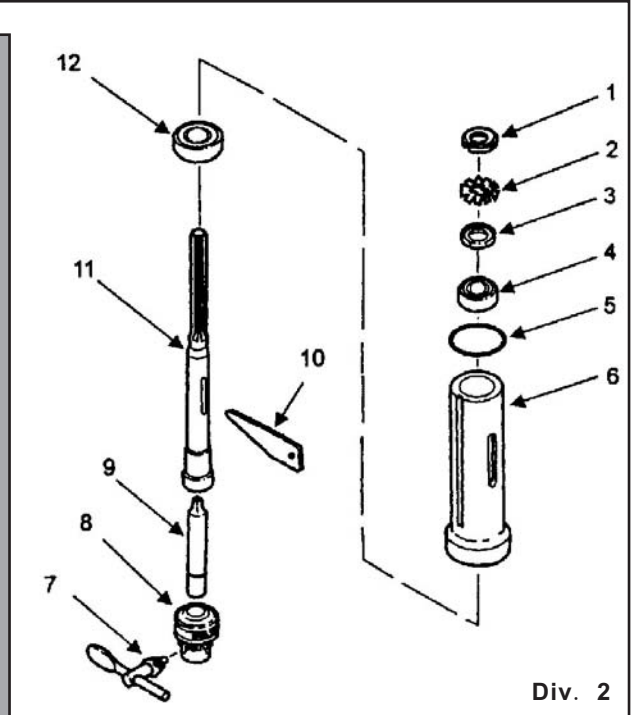

Div. 2

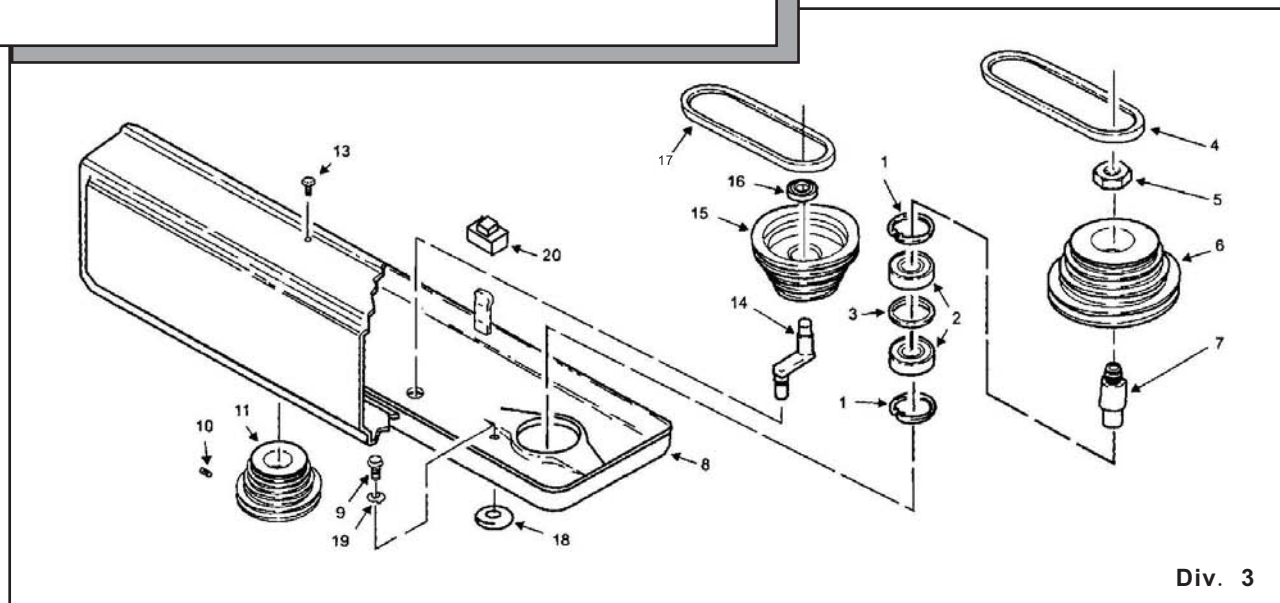

Div. 3

Div. 1

Item Description

- 1 Screw, HS M6 x 1.0-10
- 2 Collar, Rack
- 3 Gear, Helical
- 4 Crank
- 6 Table
- 7 Clamp, Table
- 8 Screw, HH M16 x 2.0-35
- 9 Arm, Table cw Scale
- 10 Base
- 11 Support, Column
- 12 Screw, HH M10 x 1.5-40
- 13 Screw, HS M10 x 1.5-12
- 14 Tube, Column
- 15 Rack
- 16 Clamp, Column
- 17 Support, Table cw Indicator
- 18 Worm, Elevation
- 19 Pin, Gear

Div. 2


Item Description

- 1 Nut, Lock
- 2 Ring, Locking
- 3 Washer
- 4 Bearing, 17mm
- 5 Washer, Rubber
- 6 Tube, Quill
- 7 Key, Chuck
- 8 Chuck
- 9 Arbor
- 10 Key, Drift
- 11 Spindle
- 12 Bearing

Div. 3

Item Description

- 1 Ring, Retaining
- 2 Bearing, 25mm
- 3 Spacer, Bearing
- 4 V Belt
- 5 Nut, Pulley
- 6 Pulley, Spindle
- 7 Insert, Pulley
- 8 Guard, Pulley cw Labels
- 9 Screw, RH M6 x 1.0-16
- 10 Screw, Set M10 x 1.5-12
- 11 Pulley, Motor
- 13 Screw, PH M5 x 0.8-12
- 14 Pivot, Idler
- 15 Pulley, Centre
- 16 Bearing, 15mm
- 17 V Belt
- 18 Washer, Foam
- 19 Lock Washer, External M6
- 20 Micro Switch

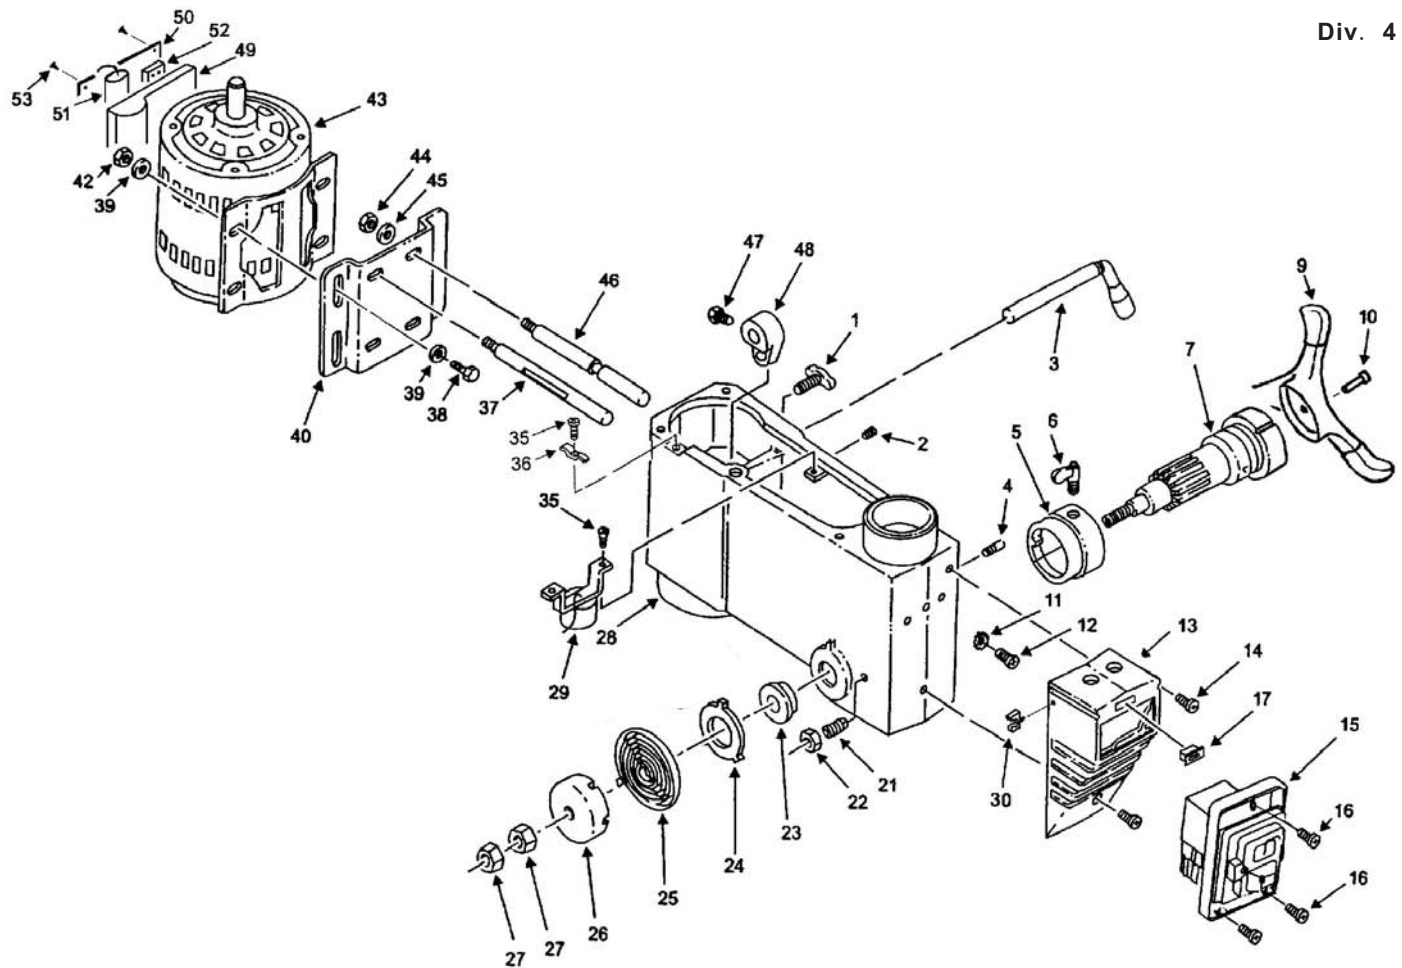**Div. 4****Item Description**

- 1 Knob, Motor Adjusting
- 2 Screw, Socket M10 x 1.5-12
- 3 Handle, Belt Tension
- 4 Pin, Stop
- 5 Ring, Depth Stop cw Scale
- 6 Lock, Depth Screw
- 7 Hub
- 9 Handle
- 10 Bolt
- 11 Lock Washer, External M5
- 12 Screw, PH M5 x 0.8-8
- 13 Box, Switch
- 14 Screw, PH M5 x 1.8-8
- 15 Switch, No Volt
- 16 Screw, PH M4.2 x 1.4-8
- 17 Switch (TR-201M for light, TR-201T for motor)
- 21 Screw, Spec' I M10 x 1.5-27
- 22 Hex. Nut, M10
- 23 Seat, Spring
- 24 Retainer, Spring
- 25 Spring, Torsion
- 26 Cap, Spring

Div. 4 Continued**Item Description**

- 27 Hex. Nut, M12 x 1.5-8
- 28 Head cw Pointer and Trim
- 29 Bulb Holder (TR-251M only)
- 30 Clip, Chuck Key
- 35 Screw, PH M6 x 1.0-12
- 36 Clamp, Cord
- 37 Support, Motor Bracket
- 38 Screw, HH M8 x 1.25-20
- 39 Washer, 8 x 16 x 1.6
- 40 Mount, Motor
- 42 Hex. Nut, M8 x 1.25
- 43 Motor
- 44 Hex. Nut, M12 x 1.75
- 45 Lock Washer, 1-2"
- 46 Support, Motor Bracket
- 47 Screw, HH M8 x 1.25-16
- 48 Lever, Adjusting
- 49 Terminal Box
- 50 Cover, Terminal Box
- 51 Capacitor
- 52 Terminal Block
- 53 Screw



When ordering repair parts, always give the following information:
Model number, Div Number, Item number, Part description
i.e. Model: DP1520F Div 4, Item 43, Motor

NOTE: The above specifications and the constructions were current at the time this manual was published, but because of our policy of continuous improvement, we reserve the right to change specifications and the constructions without notice and without incurring obligations.