


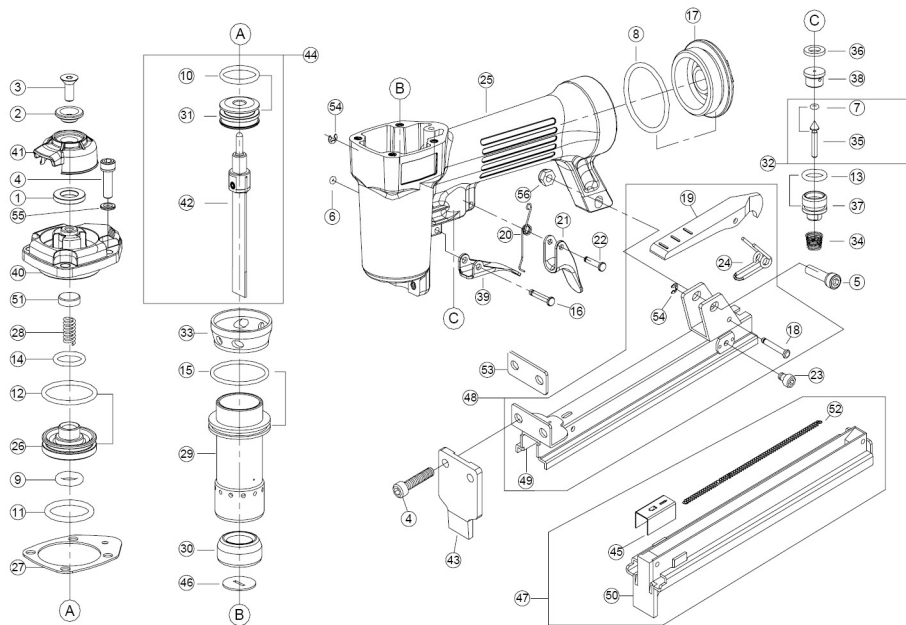

Air Stapler

Item No : SU-8016

● The consumable parts ▲ The replacement parts ★ The non-replacement parts



Part List

Item No : SU-8016

	No.	Index No.	Description	Q'ty		No.	Index No.	Description	Q'ty
★	1	SU-8016NP01	PISTON STOP	1	▲	29	SU-8016NP29	CYLINDER	1
★	2	SU-8016NP02	EXHAUST CAP RING	1	●	30	SU-8016NP30	BUMPER	1
★	3	SU-8016NP03	FLAT HD.BOLT	1	★	31	SU-8016NP31	MAIN PISTON	1
★	4	SU-8016NT04	HEX.SOC.HD.BOLT (6PCS)	1 SET	▲	32	SU-8016NP32	TRIGGER VALVE ASSY.	1
★	5	SU-8016NP05	HEX.SOC.HD.BOLT	1	▲	33	SU-8016NP33	COLLAR	1
★	6	SU-8016NP06	O-RING	1	★	34	SU-8016NP34	COMPRESSION SPRING	1
▲	7	SU-8016NP07	O-RING	1	▲	35	SU-8016NP35	TRIGGER VALVE STEM	1
▲	8	SU-8016NP08	O-RING	1	★	36	SU-8016NP36	SEAL	1
▲	9	SU-8016NP09	O-RING	1	★	37	SU-8016NP37	TRIGGER VALVE GUIDE	1
●	10	SU-8016NP10	O-RING	1	★	38	SU-8016NP38	TRIGGER VALVE SEAT	1
▲	11	SU-8016NP11	O-RING	1	★	39	SU-8016NP39	TRIGGER	1
▲	12	SU-8016NP12	O-RING	1	★	40	SU-8016NP40	CYLINDER CAP	1
▲	13	SU-8016NP13	O-RING	1	★	41	SU-8016NP41	EXHAUST CAP	1
▲	14	SU-8016NP14	O-RING	1	●	42	SU-8016NP42	DRIVER SET	1
▲	15	SU-8016NP15	O-RING	1	▲	43	SU-8016NP43	COVER PLATE	1
★	16	SU-8016NP16	PIN	1	●	44	SU-8016NP44	DRIVER ASSY.	1
★	17	SU-8016NP17	END CAP	1	★	45	SU-8016NP45	PUSHER	1
★	18	SU-8016NP18	PIN	1	▲	46	SU-8016NP46	NOZZLE	1
★	19	SU-8016NP19	LATCH	1	★	47	SU-8016NP47	MAGAZINE SEAT ASSY.	1
★	20	SU-8016NP20	SPRING	1	★	48	SU-8016NP48	MAGAZINE CAP ASSY.	1
★	21	SU-8016NP21	SAFETY LEVER	1	★	49	SU-8016NP49	MAGAZINE CAP SET	1
★	22	SU-8016NP22	PIN	1	★	50	SU-8016NP50	MAGAZINE SEAT SET	1
★	23	SU-8016NT23	RETAINER SCREW (2PCS)	1 SET	★	51	SU-8016NP51	PISTON STOP	1
★	24	SU-8016NP24	LATCH SPRING	1	★	52	SU-8016NP52	PULL SPRING	1
★	25	SU-8016NP25	BODY	1	★	53	SU-8016NP53	SPACER	1
★	26	SU-8016NP26	HEAD VALVE PISTON	1	★	54	SU-8016NT54	E-RING (2PCS)	1 SET
▲	27	SU-8016NP27	CAP SEAL	1	★	55	SU-8016NT55	SPRING WASHER (4PCS)	1 SET
★	28	SU-8016NP28	COMPRESSION SPRING	1	★	56	SU-8016NP56	LOCK NUT	1