 


4 寸泥浆泵机组零件图册

BOM for Slurry pump 4-inches

E-01 动力总成/ENGINE.....	2-6
E-02 机架组件总成/FRAME.....	7
E-03 泵体总成/PUMP.....	8-9
E-04 附件总成/ACCESSORY.....	10

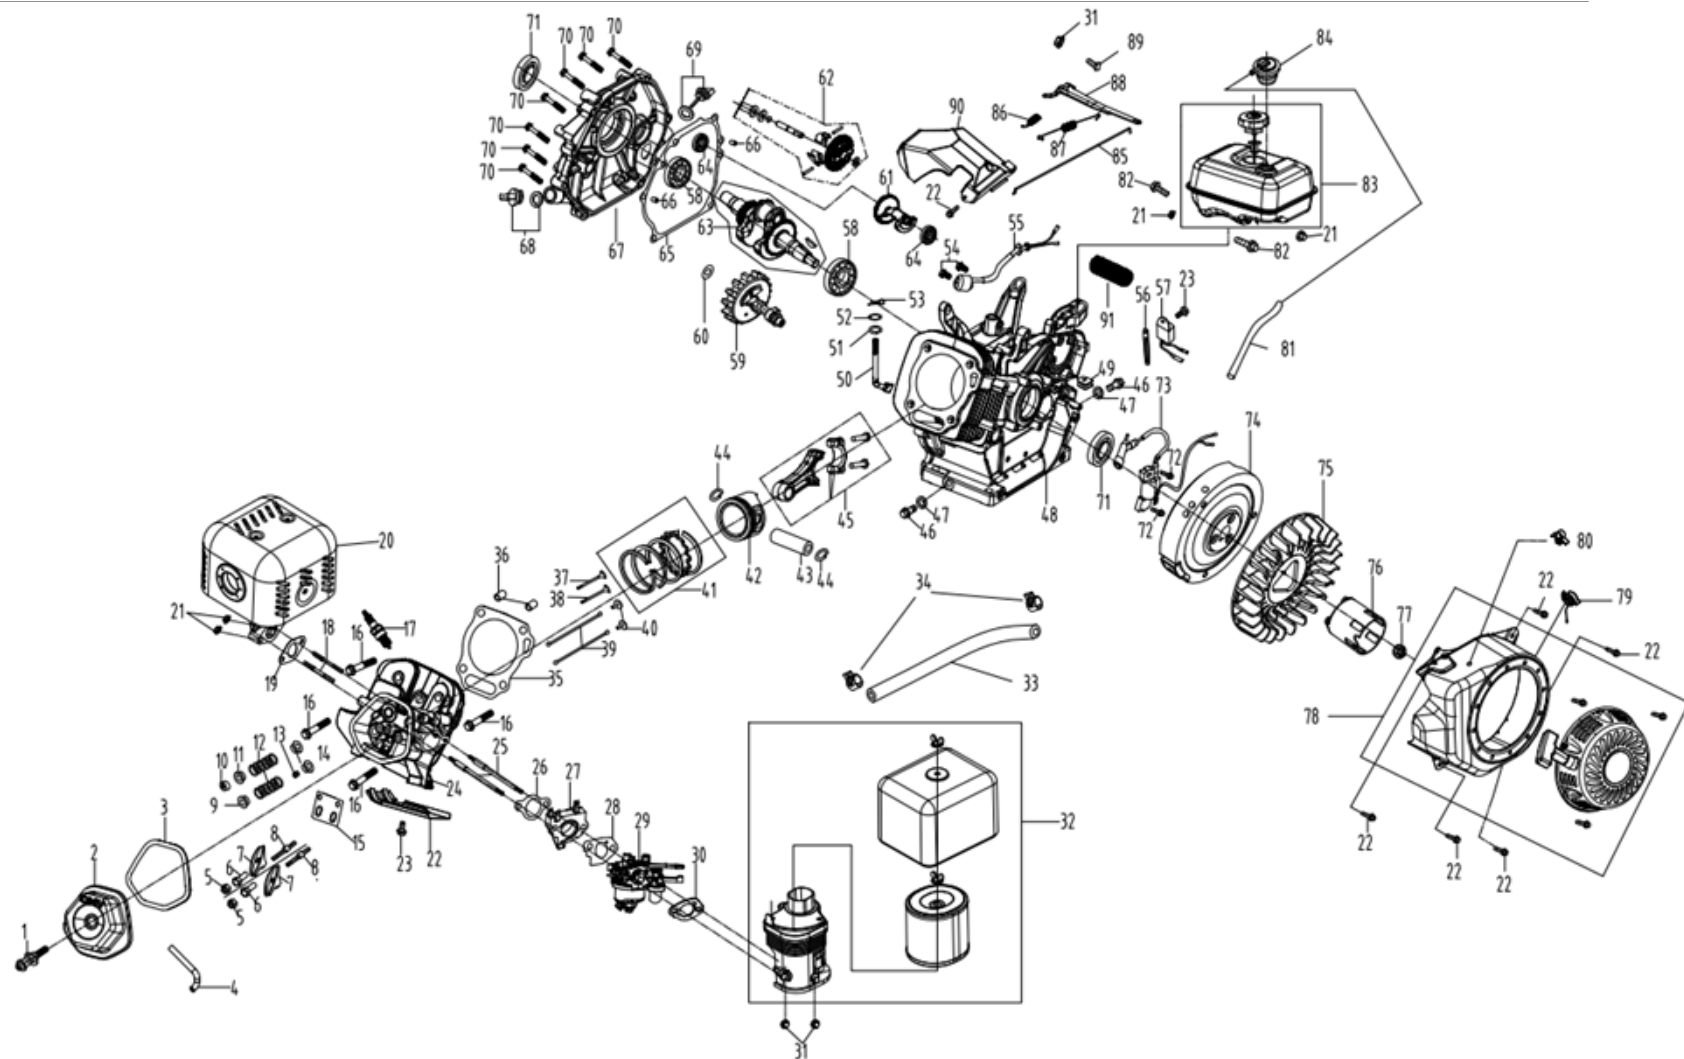

序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
1	异形组合螺栓	33580-00014-00	BOLT		1		
2	汽缸盖组件	20021-00004-00	COVER COMP.HEAD		1		
3	汽缸盖密封垫	33048-00028-00	GASKET,HEAD COVER		1		
4	废气管	34023-00020-00	Exhaust pipe		1		
5	六角螺母	30121-00034-00	NUT M8		2		
6	摇臂轴/M6/球形螺母	30134-00005-00	NUT		2		
7	气门摇臂	34019-00005-00	ROCKER ARM		2		
8	摇臂轴螺栓	30110-00033-00	BOLT VALVE		2		
9	气门锁夹	34016-00009-00	Valve Cotter		2		


10	气门锁夹	34016-00009-00	Valve Cotter		2		
11	气门弹簧座	34016-00005-00	RETAINER,VALVE SPRING		2		
12	气门弹簧	34015-00023-00	VALVE SPRING		2		
13	油封	34007-00001-00	OIL SEAL		1		
14	排气门弹簧下座	34016-00008-00	RETAINER,VALVE SPRING		2		
15	推杆导板	34017-00008-00	PLATE,PUSH ROD GUIDE		1		
16	六角法兰面螺栓	30101-00289-00	BOLT		4		
17	火花塞部件	20027-00010-00	SPARK PLUG		1		
18	排气门双头螺栓	30110-00028-00	BOLT,STUD,EXHAUST		2		
19	消声器垫片	33048-00095-00	WASHER,MUFFLER		1		
20	消声器	20202-00338-00	MUFFLER		1		
21	六角螺母	30121-00040-00	NUT M8		2		
22	挡风板	34021-00001-00	Shield		1		
23	六角法兰面螺栓	30101-00070-00	BOLT		1		
24	汽缸头总成	20023-00061-00	CYLINDER HEAD COMP		1		
25	进气双头螺栓	30110-00022-00	BOLT,STUD,INTAKE		1		
26	进气口密封垫	33048-00053-00	GASKET,INLET		1		
27	化油器连接块	34012-00014-00	INSULATOR,CARBURE TOR		1		
28	化油器垫片	33048-00078-00	WASHER,CARBURETO R		1		
29	化油器总成	20024-00100-00	CARBURETOR		1		
30	空滤器垫片	33048-00082-00	GASKET,AIR FILTER		1		
31	六角法兰面螺母	30125-00002-00	Flange nut		2		
32	空滤器总成	20025-00043-00	AIR CLEANER ASSY		1		

33	油管	34023-00004-00	OIL PIPE		1		
34	卡箍	34024-00002-00	CLAMP		1		
35	缸头密封垫	33048-00035-00	GASKET,CYLINDER		1		
36	定位销	34006-00007-00	DOWEL PIN		2		
37	排气门	34013-00034-00	VALVE,EXHAUST		1		
38	进气门	34013-00080-00	VALVE, INTAKE		1		
39	气门推杆	34020-00010-00	PUSH ROD		1		
40	气门挺柱	34008-00006-00	LIFTER,VALVE		1		
41	活塞环组件	20084-00009-00	RING SET,PISTON		1		
42	活塞	34004-00016-00	PISTON		1		
43	活塞销	34006-00015-00	PIN,PISTON		1		
44	活塞卡销	30150-00023-00	CLIP,PISTON PIN		2		
45	连杆总成	20008-00008-00	CONNECTING ROD ASSY		1		
46	放油螺栓	30101-00514-00	BOLT,M10×15		2		
47	放油螺栓垫片	30136-00080-00	SPACER;BOLT,M10×15		2		
48	箱体	34011-00019-00	CRANKCASE		1		
49	橡胶固定箱盖密封圈 块	33036-00044-00	Block - rubber		1		
50	调速摆杆	34026-00005-01	Speed swinging rod		1		
51	油封	34007-00002-00	OIL SEAL		2		
52	摆杆垫片	30136-00095-00	Spacer;Speed swinging rod		1		
53	定位销锁夹	34006-00017-00	PIN, LOCK		1		
54	六角法兰面螺栓	30101-00342-00	BOLT		2		
55	机油传感器	33247-00027-00	ENGINE OIL SENSOR		1		
56	金属线夹	34024-00004-00	CLIP		1		
57	机油报警器	33246-00002-00	OIL ALARM		1		


58	深沟球轴承	30141-00112-00	BEARING		2		
59	凸轮轴	20012-00017-00	CAMSHAFT		1		
60	凸轮轴平垫圈	/	WASHER;CAMSHAFT				
61	平衡轴	34033-00001-00	BALANCE SHAFT		1		
62	调速齿轮	20013-00004-00	GOVERNOR GEAR		1		
63	曲轴	20011-00089-00	CRANKSHAFT		1		
64	深沟球轴承	30141-00116-00	BEARING		1		
65	箱盖密封圈	33048-00063-00	GASKET,CRANKCASE COVER		1		
66	定位销	34006-00001-00	DOWEL PIN		2		
67	箱盖	33129-00015-00	CRANKCASECOVER		1		
68	机油塞组件	20026-00019-00	OIL CAP ASSY		1		
69	机油尺组件	20026-00005-00	DIPSTICK ASSY		1		
70	六角法兰面螺栓	30101-00370-00	BOLT		7		
71	油封	34007-00012-00	OIL SEAL		2		
72	六角法兰面螺栓	30101-00408-00	BOLT		2		
73	点火线圈	20028-00029-00	WIRE,ENGINE SWITCH		1		
74	飞轮	20051-00018-00	FLYWHEEL COMP		1		
75	风扇	33155-00042-00	FAN COOLING		1		
76	启动杯	34022-00028-00	PULLEY,STARTER		1		
77	六角法兰面螺母	30125-00064-00	NUT		1		
78	启动器总成	20010-00069-37	RECOIL STARTER COMP		1		
79	熄火开关	31026-00057-00	IGNITE SWITCH		1		
80	线卡	34024-00009-00	CLIP		1		
81	/						
82	六角法兰面螺栓	30101-00098-00	BOLT		2		

83	燃油箱总成	20130-00028-28	FUEL TANK ASSY		2		
84	/						
85	调速拉杆	34026-00008-00	ROD,GOVERNOR		1		
86	复位弹簧	34015-00020-00	SPRING,CABLE RETURN		1		
87	微调弹簧	34015-00010-00	SPRING,THROTTLE RETURN		1		
88	调速臂	34025-00007-00	HANDLE,SPEED CONTROL		1		
89	T 型螺栓	/	T-BOLT				
90	调速控制器总成	20022-00013-00	SPEED CONTROL,ASSY		1		
91	波纹管	40052-00021-00	BELLOWS		1		

 E-02 机架组件总成/FRAME

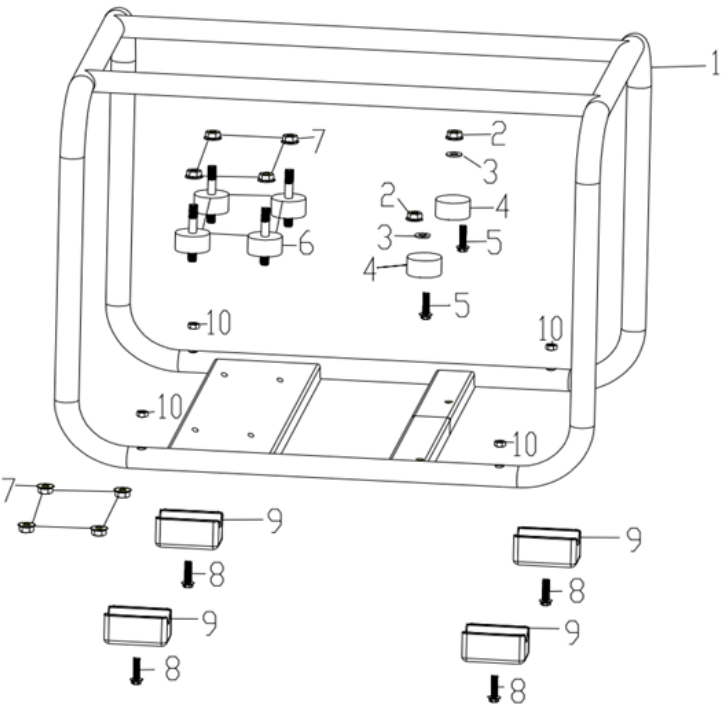


序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
1	20090-01544-00	机架总成	Frame components		1		
2	30125-00003-00	六角法兰面螺栓	BOLT		2		
3	30136-00123-00	平垫圈	Washer		4		
4	34030-00094-00	减震胶垫	Vibration pad		2		
5	30101-00468-00	六角法兰面螺栓	BOLT		2		
6	34030-00069-00	双头减震螺栓	STUD BOLT		2		
7	30125-00003-00	六角法兰面螺母	NUT		2		
8	/	内六角螺栓	BOLT		4		
9	34030-00058-00	减震胶垫	Vibration pad		8		
10	/	尼龙螺母	Nylon nut				

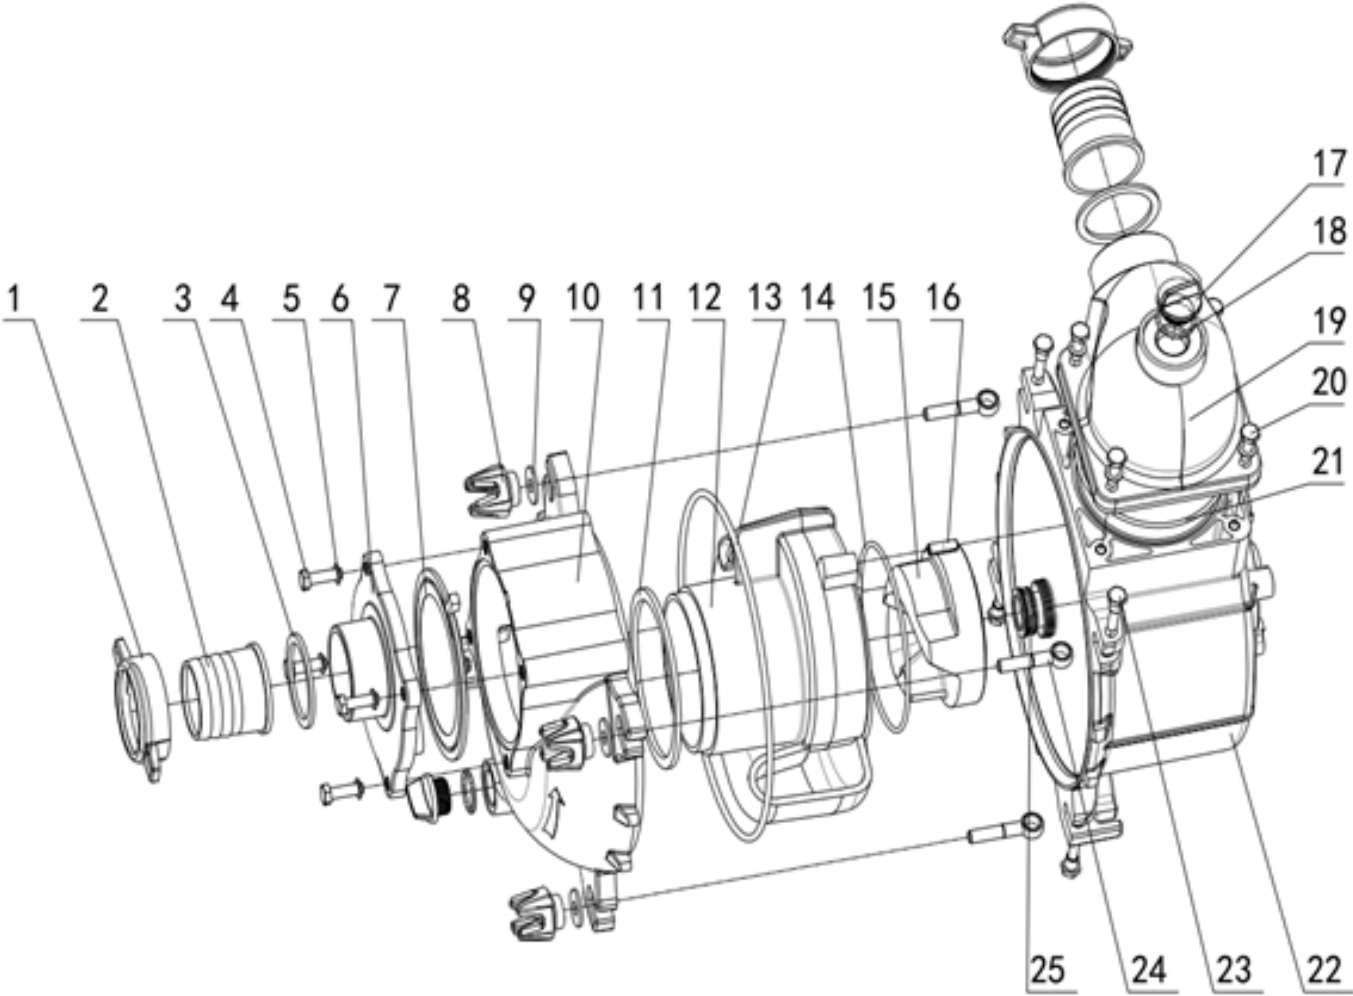 

序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)			N.W. (kg) /PC
1		压帽扳手螺母	Nut;cap wrench				
2		直管	Straight pipe				
3		直管密封垫	Gasket;Straight pipe				
4		六角螺栓	Hexagon Bolt				
5		平垫圈	Washer				
6		进水口座	Water inlet seat				
7		止回阀	Inverted valve				
8		异型螺母	NUT				
9		平垫圈	Washer				
10		泵体	PUMP BODY				
11		蜗壳密封圈	O-ring,Volute components				
12		蜗壳组件	Volute components				
13		泵体密封圈	O-ring,PUMP BODY				
14		蜗壳 o 型密封圈	O-ring,Volute components				
15		叶轮	Impeller				
16		定位销	DOWEL PIN				
17		堵头	Drain plug				
18		堵头密封圈	O-ring,Drain plug				
19		出水口座	Water outlet seat				
20		六角螺栓	Hexagon Bolt				
21		出水口座密封圈	O-ring,Water outlet seat				
22		泵底座	PUMP SEAT				
23		六角螺栓	Hexagon Bolt				
24		异型螺栓	Bolt				
25		机械密封	WATER SEAL				

E-04 附件总成

 /ACCESSORY

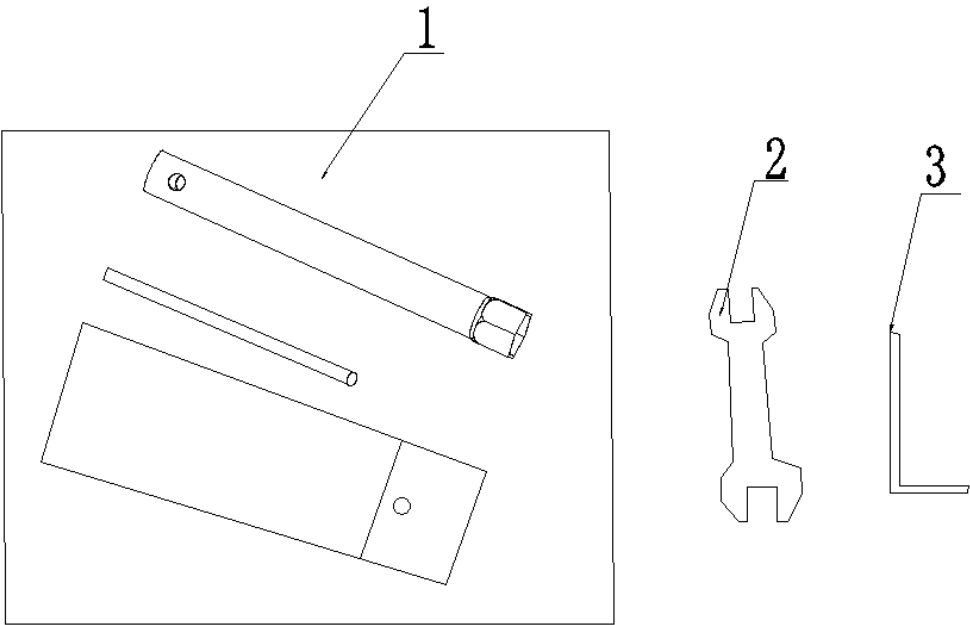

序号 NO.	零部件编码 Part NO.	零部件名称 Description			数量 QTY		
		中文	English	Price (USD)		SC11000E-III	N.W. (kg) /PC
1	70009-00313-00	工具包/加力杆Φ7*131 白锌 /火花塞套筒 M21*180 白锌/ 工具袋 215*80/	KIT		1		
2	70003-00909-00	开口扳手	Spanner wrench		1		
3	70003-00858-00	内六角扳手	Hexagon wrench		1		

4 寸泥浆泵机组零件图册

BOM for Slurry pump 4-inches

型号/MODEL: SCST100

10004-000948-00

编制:

校对:

会签:

审核:

批准: