



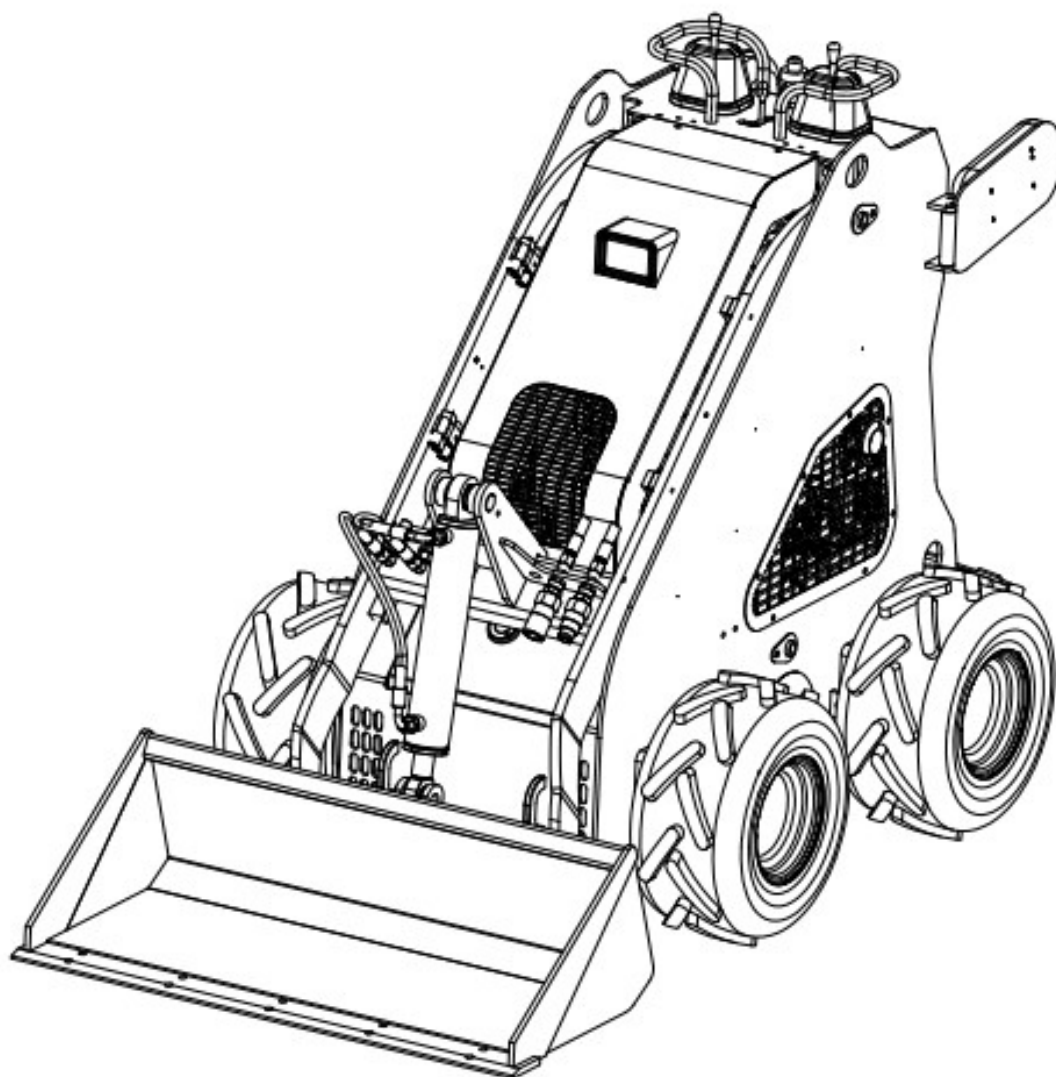


360 SKID STEER LOADER

PARTS CATALOG

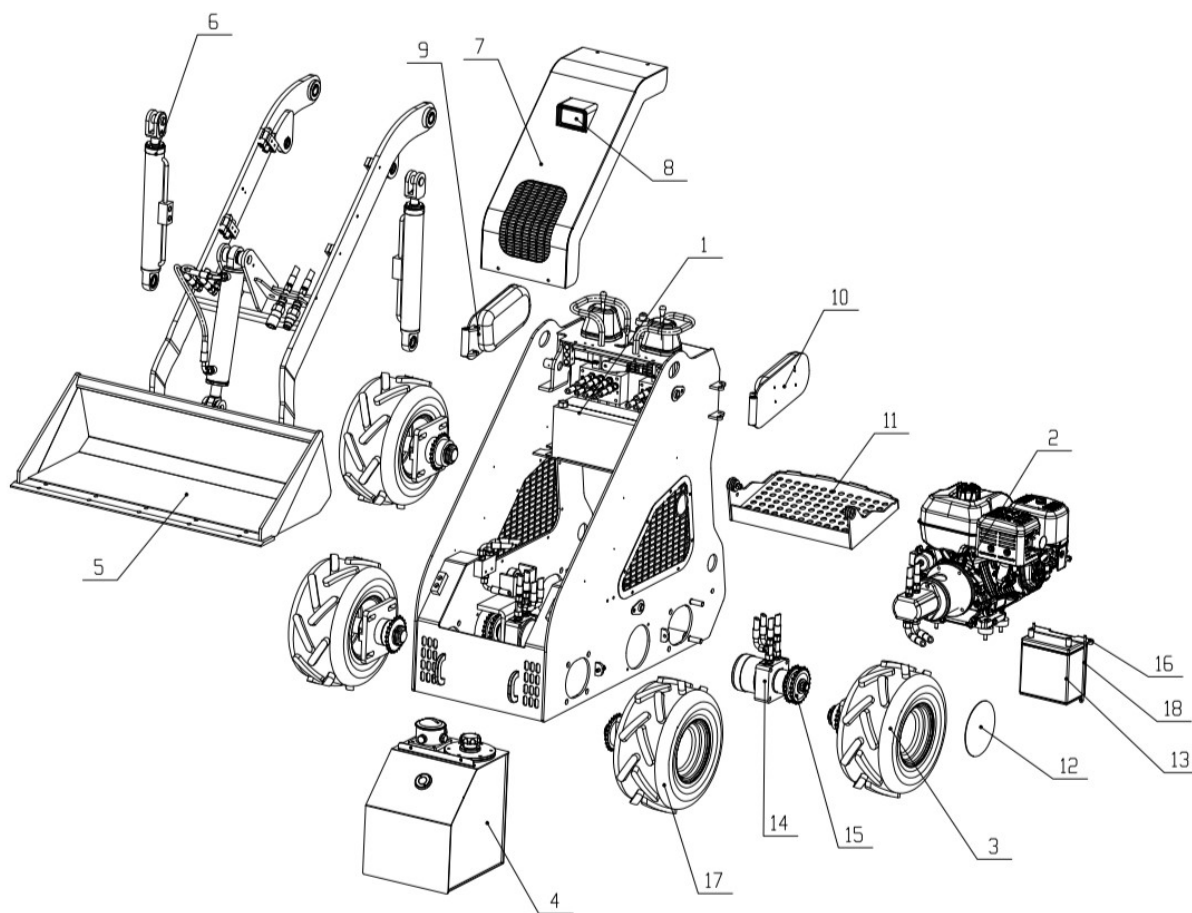


Dismantlele Whole Machine

No	Part No	零件名称	Description	Q'ty	Remark
1	360BF000-1	机架部件总成	Rack Component Assembly	1	
2	360BF000-2	发动机部件总成	ENGINE PARTS GP-ENGINE	1	
3	360BF000-3	行走轮部件总成	PART GP-TRAILING ROLLER	1	
4	360BF000-4	液压油箱总成	Hydraulic Tank Assembly	1	
5	360BF000-5	举升部件总成	Lifting Component Assembly	1	
6	360BF000-6	举升油缸	Lifting cylinder	2	
7	360BF000-7	护罩	Shield	1	
8	360BF000-8	前照灯	Headlamps	1	12V, 24W
9	360BF000-9	左防护板	Lift shield	1	
10	360BF000-10	右防护板	Right shield	1	
11	360BF000-11	脚踏板	Pedal board	1	
12	360BF000-12	链轮盖板	Sprocket cover plate	1	
13	360BF000-13	蓄电池	Storage battery	1	12V, 36Ah
14	360BF000-14	驱动马达	Drive the motor	2	300cc
15	360BF000-15	马达链轮	Motor sprocket	2	
16	360BF000-16	电瓶压板	Battery pressure plate	1	
17	360BF000-17	前行走轮总成	Front travelling wheel assembly	1	
18	360BF000-18	电瓶拉杆	Battery pull rod	2	L=245

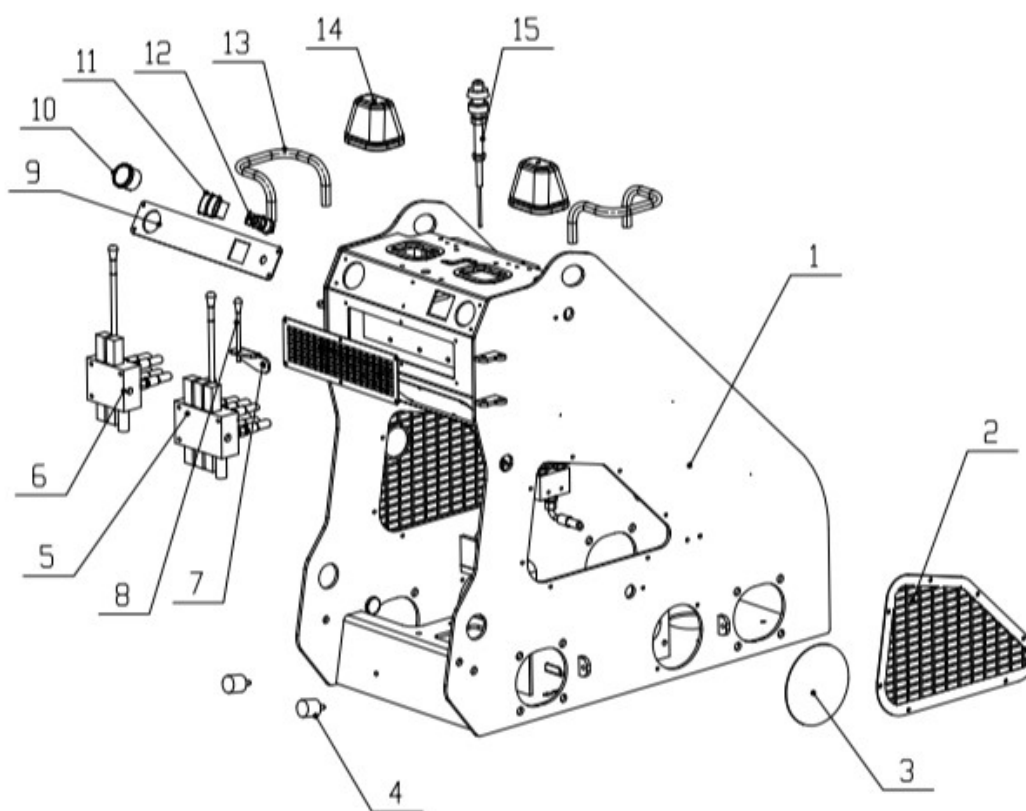


Rack Component Assembly

No	Part No	零件名称	Description	Q'ty	Remark
1	360BF001-1	机架	Rack	1	
2	360BF001-2	右网板	Right screen	1	
3	360BF001-3	链轮盖板	Sprocket cover plate	2	
4	360BF001-4	减震块	Damping block	2	Φ 40*40
5	360BF001-5	三联阀	Triple valve	1	M45/3
6	360BF001-6	双联阀	Duplex valve	1	M45/2
7	360BF001-7	辅助换向板	Auxiliary reversing plate	1	
8	360BF001-8	属具操作杆	Attachment operating lever	1	L=149
9	360BF001-9	面板	Panel	1	
10	360BF001-10	计时器	The timer	1	Φ 52
11	360BF001-11	双联翘板开关	Duplex rocker switch	1	
12	360BF001-12	启动开关	Start the switch	1	
13	360BF001-13	扶手	Handrail	2	
14	360BF001-14	橡胶护套	Rubber sheath	2	
15	360BF001-15	油门拉线	Throttle cable	1	

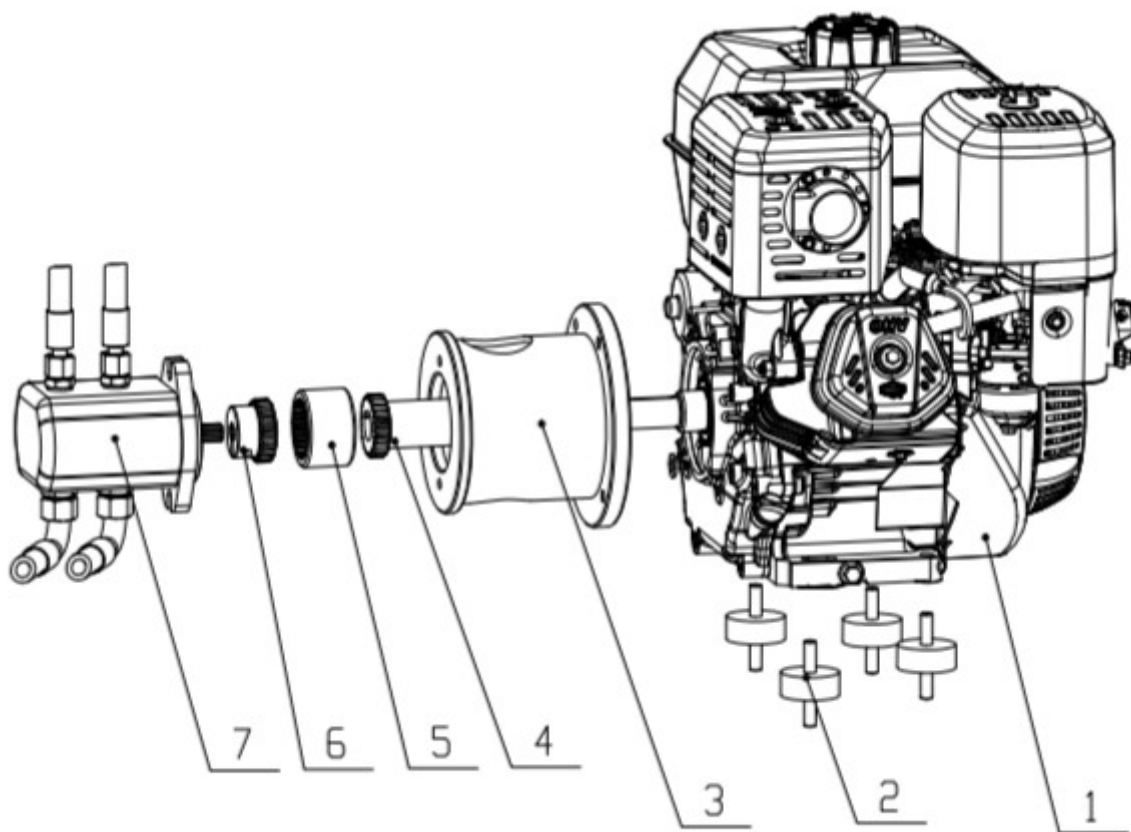


ENGINE PARTS GP-ENGINE

No	Part No	零件名称	Description	Q'ty	Remark
1	360BF002-1	发动机	The engine	1	25T2/R420
2	360BF002-2	减震块	Damping block	4	Φ50*20
3	360BF002-3	泵座	Pump seat	1	
4	360BF002-4	发动机联轴器	Engine coupling	1	
5	360BF002-5	尼龙套	Nylon set	1	NL3
6	360BF002-6	液压泵联轴器	Hydraulic pump coupling	1	
7	360BF002-7	液压泵	Hydraulic pump	1	GP5

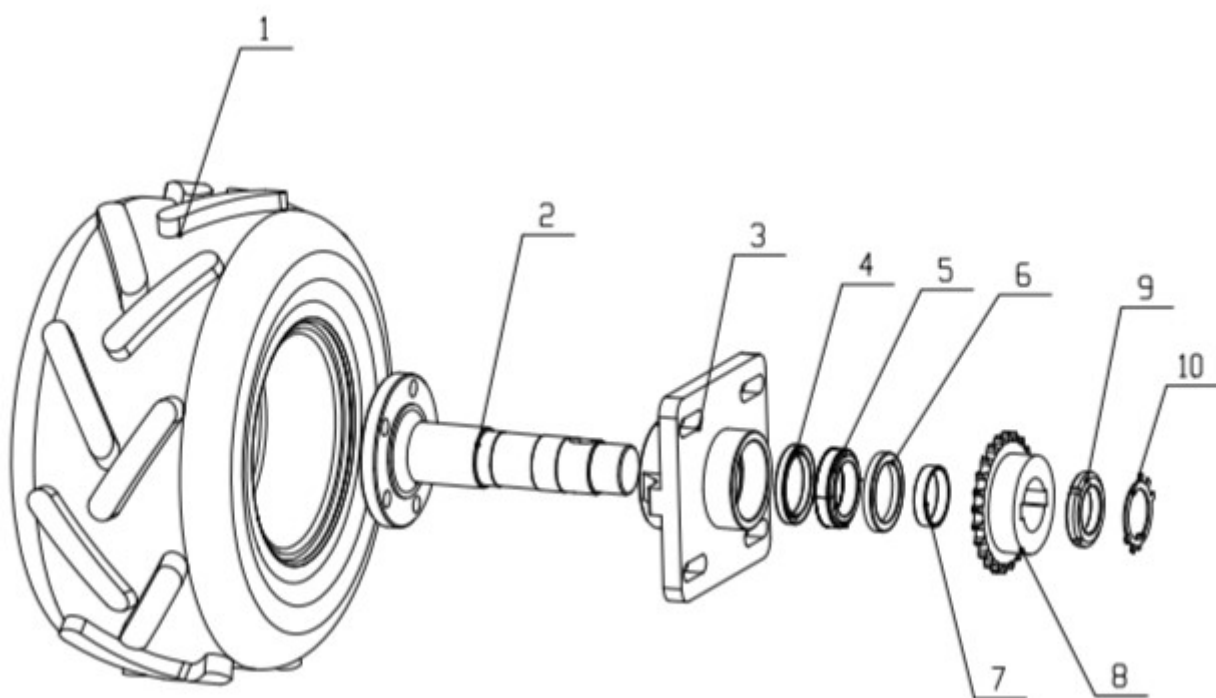


PART GP-TRAILING ROLLER

No	Part No	零件名称	Description	Q'ty	Remark
1	360BF003-1	橡胶轮胎	Rubber tires	4	18*8.5-8
2	360BF003-2	车轮轴	Wheel axle	4	
3	360BF003-3	车轮安装座	Wheel mounting base	4	
4	360BF003-4	骨架油封	Skeleton oil seal	4	55-72-8
5	360BF003-5	轴承	Bearing	8	32910
6	360BF003-6	骨架油封	Skeleton oil seal	4	55-72-8
7	360BF003-7	链轮隔套	Sprocket spacer sleeve	4	
8	360BF003-8	车轮链轮	Wheel sprocket	4	
9	360BF003-9	开槽螺母	Slotted nut	4	M45
10	360BF003-10	防松垫片	Anti-loose gasket	4	Φ45

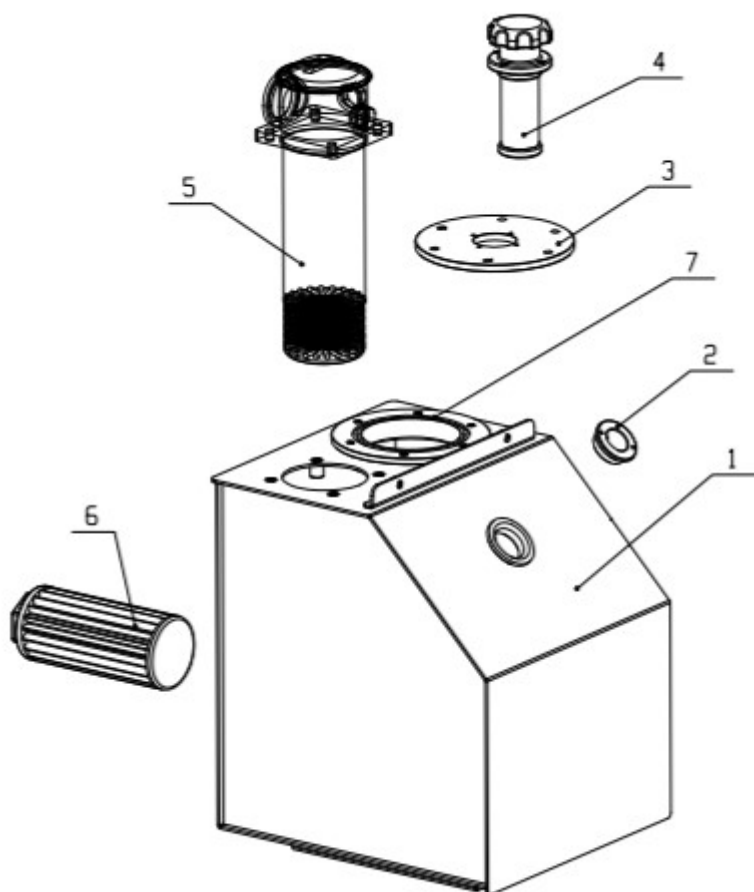

Hydraulic Tank Assembly

No	Part No	零件名称	Description	Q'ty	Remark
1	360BF004-1	液压油箱	Hydraulic oil tank	1	
2	360BF004-2	圆形油位计	Circular oil level gauge	1	ø52
3	360BF004-3	过滤器盖板	Filter cover	1	
4	360BF004-4	空气滤清器	Air filter	1	EF2-32
5	360BF004-5	回油过滤器	Return oil filter	1	RFA-100-10
6	360BF004-6	吸油过滤器	Oil suction filter	1	WU-100*100-L
7	360BF004-7	O 型圈	O-ring	1	ø120*3.55

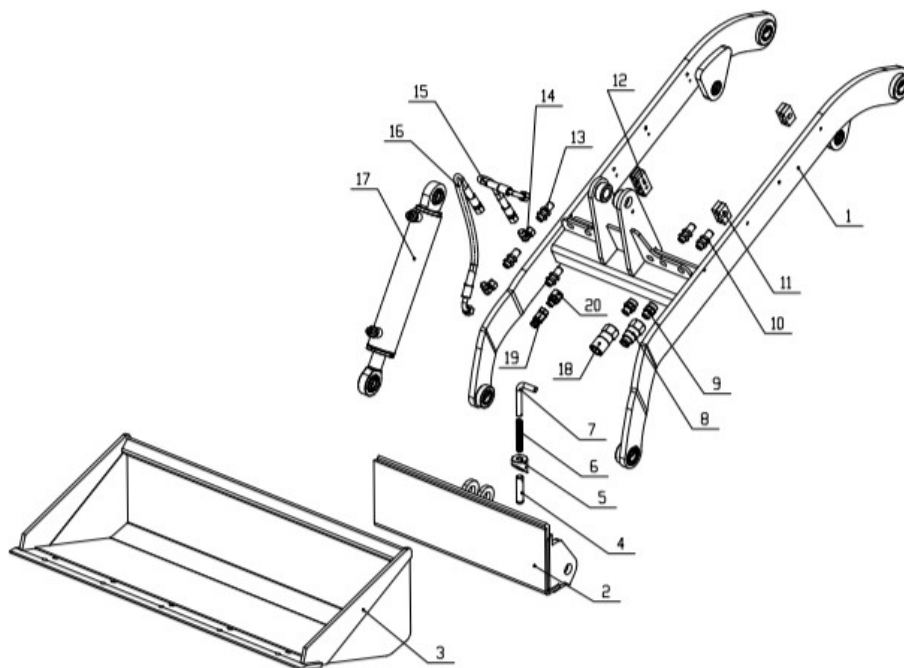

Lifting Component Assembly

No	Part No	零件名称	Description	Q'ty	Remark
1	360BF005-1	举升臂	Lift the arm	1	
2	360BF005-2	举升板	Lifting plate	1	
3	360BF005-3	铲料斗	Shovel hopper	2	
4	360BF005-4	铲斗销轴	Bucket pin shaft	2	
5	360BF005-5	销轴限位块	Pin shaft stop block	2	
6	360BF005-6	压缩弹簧	Compression spring	2	
7	360BF005-7	提拉杆	Lift the lever	2	
8	360BF005-8	快速子接头	Fast subjoint	1	1/2 in
9	360BF005-9	液压连接件	Hydraulic connectors	1	EGE12LR1/2EDA3CX
10	360BF005-10	液压连接件	Hydraulic connectors	1	SV12LA3CX
11	360BF005-11	双联管家	Double housekeeper	3	TTPG215
12	360BF005-12	三孔管夹	Three hole pipe clamp	3	
13	360BF005-13	液压连接件	Hydraulic connectors	1	SV12LA3CX
14	360BF005-14	液压连接件	Hydraulic connectors	1	EW12LA3CX
15	360BF005-15	胶管总成	Hydraulic connectors Description	1	10II-18H- M21513/M21593- 310
16	360BF005-16	胶管总成	Hydraulic connectors Description	1	10II-18H- M21513/M21593- 630
17	360BF005-17	推铲油缸	Push shovel oil cylinder	1	
18	360BF005-18	快速母接头	Fast female	1	1/2 in
19	360BF005-19	液压连接件	Hydraulic connectors	1	EGE12LR3/8EDA3CX
20	360BF005-20	快速子接头	Fast subjoint	1	3/8 in