




QJY260DP- GENERAL ASSEMBLY DIAGRAM

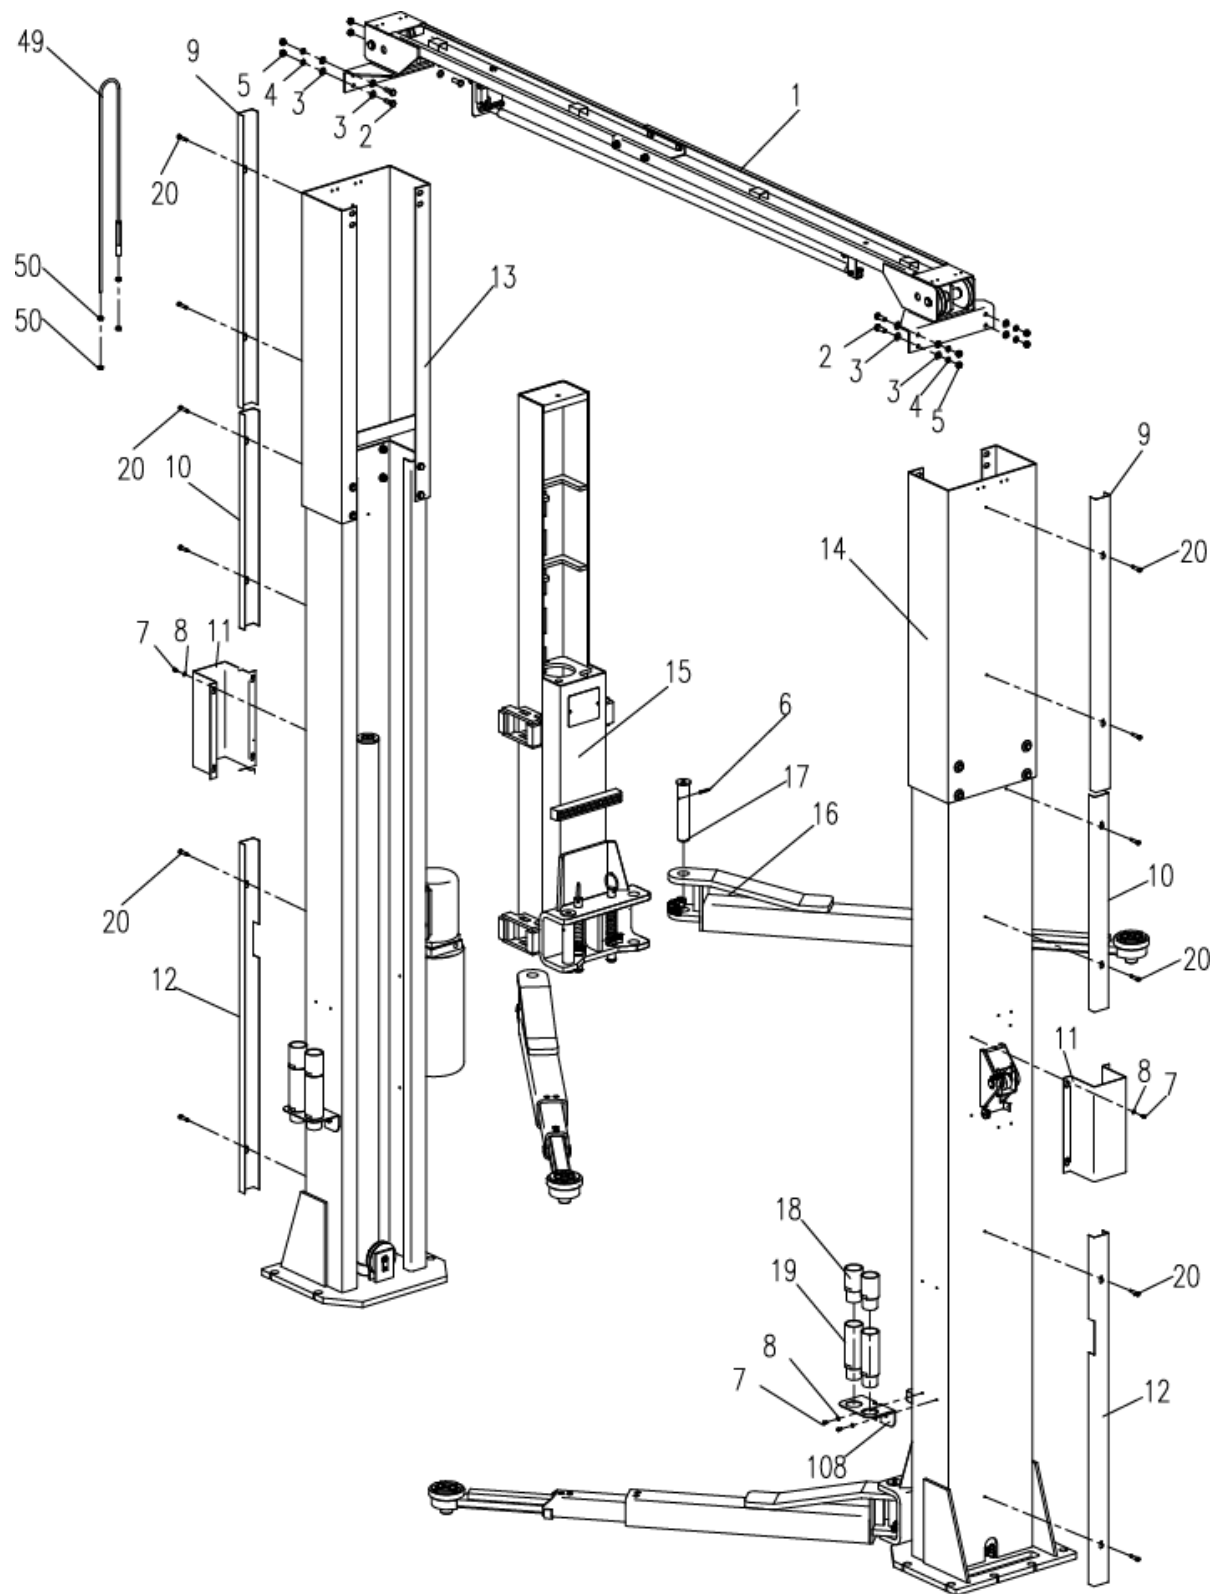


QJY260DP- GENERAL ASSEMBLY DIAGRAM

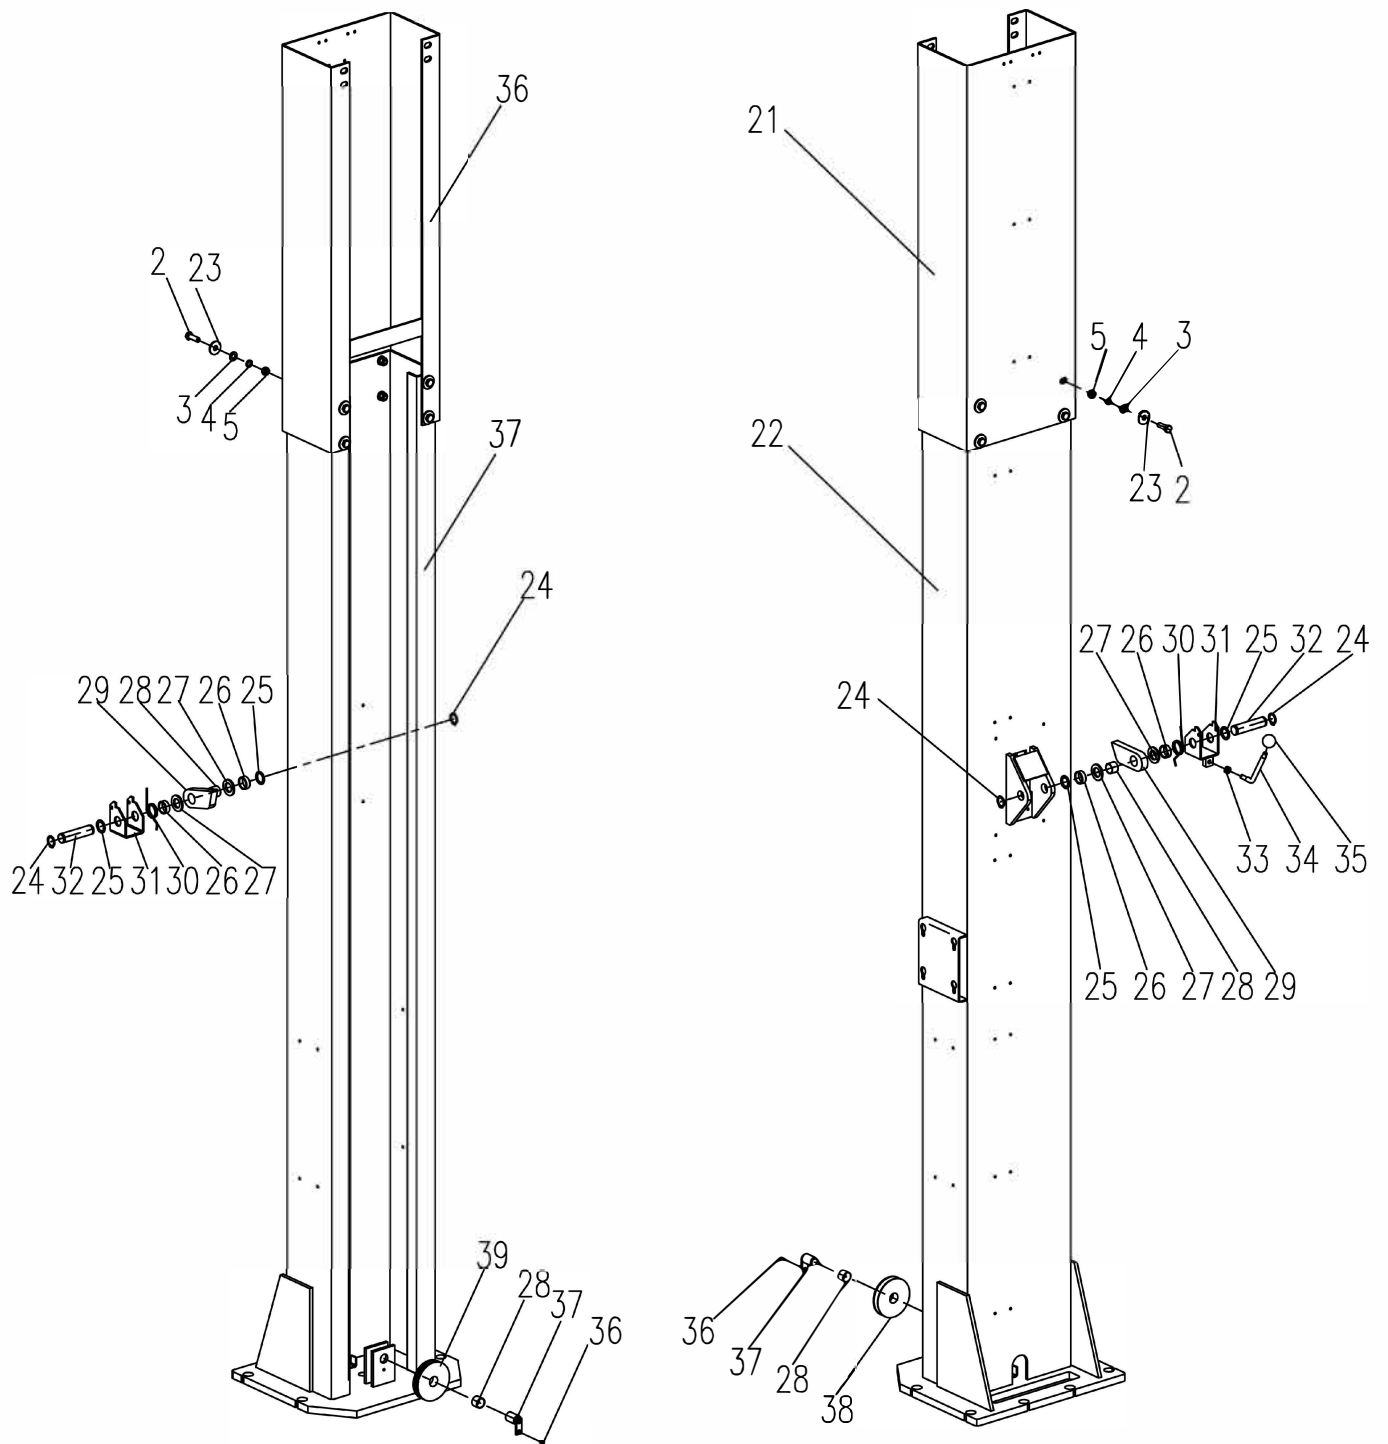


QJY260DP- GENERAL ASSEMBLY DIAGRAM

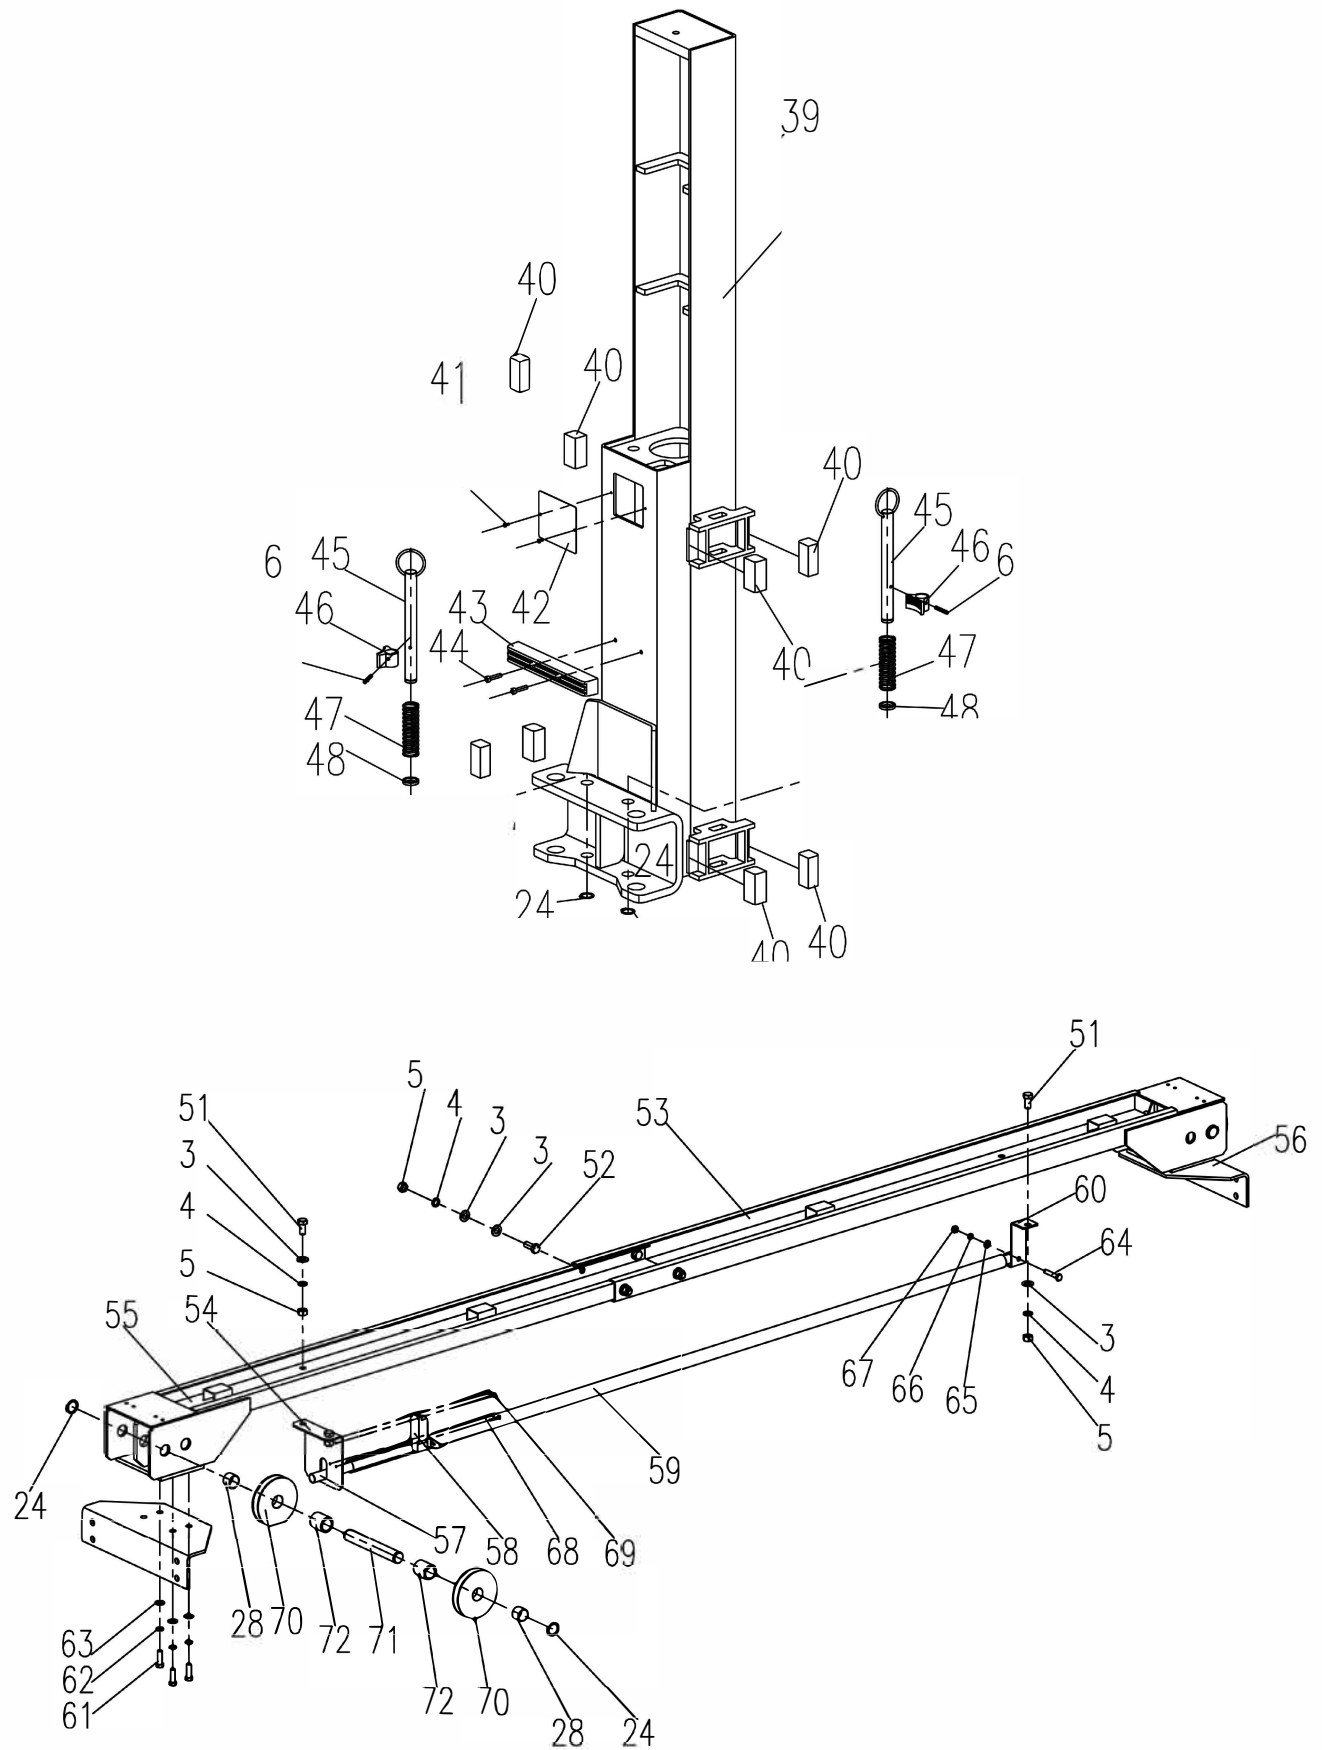

QJY260DP- GENERAL ASSEMBLY DIAGRAM

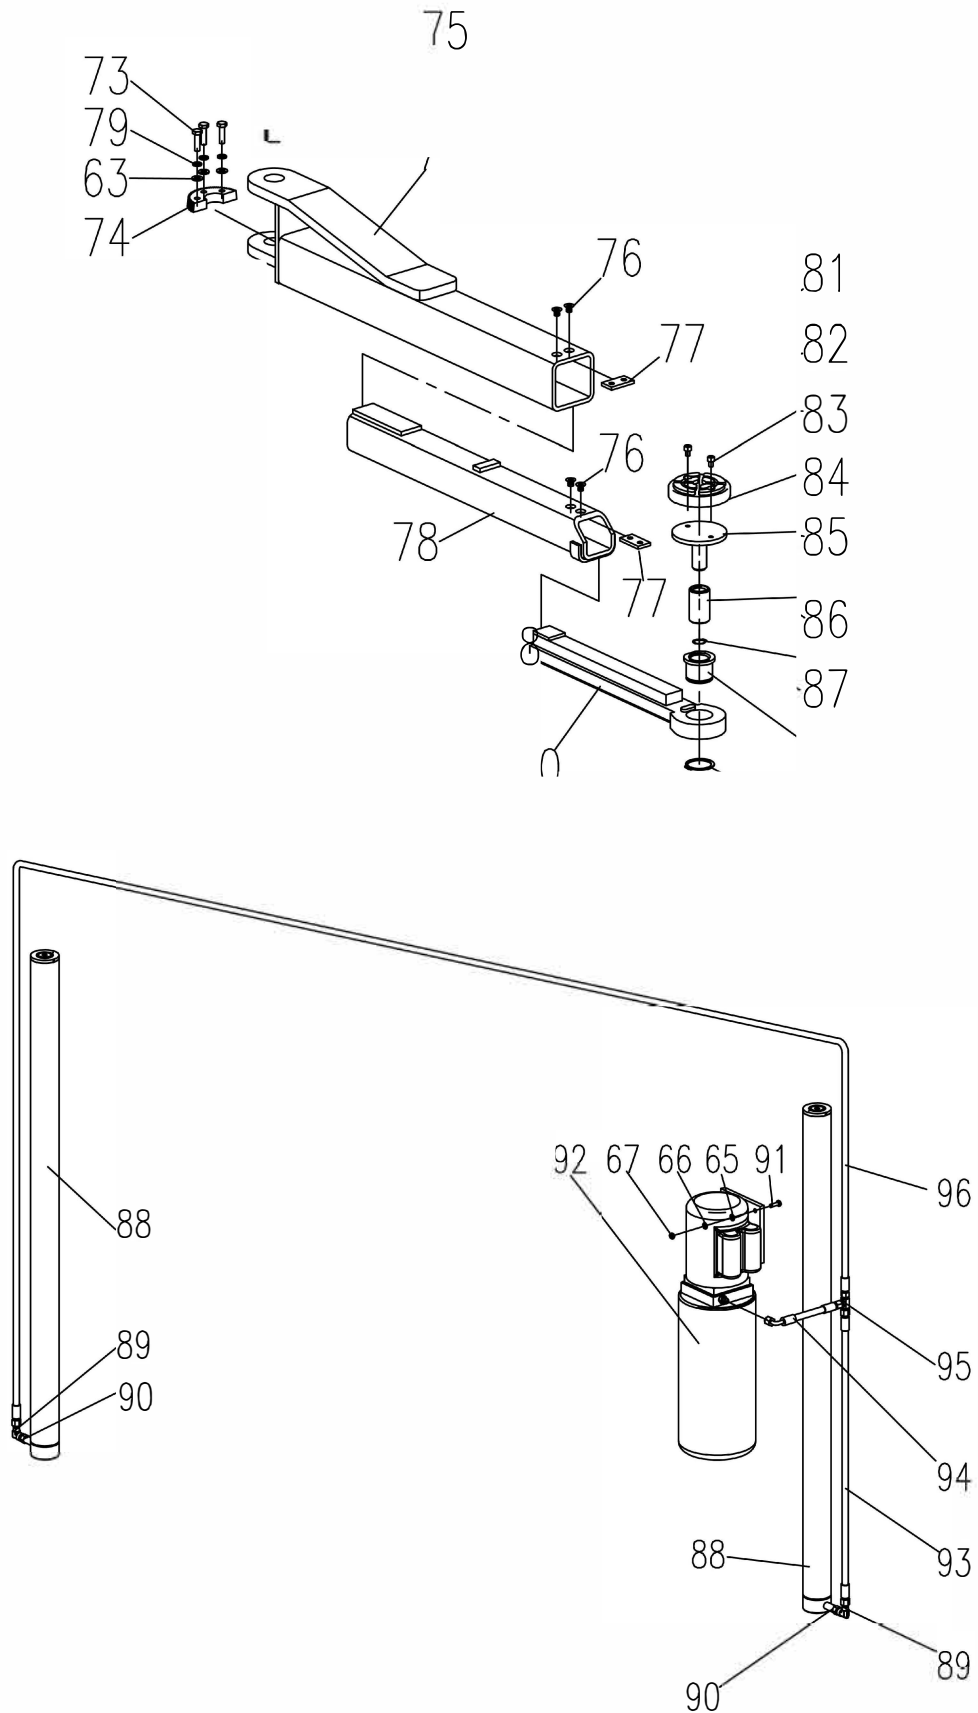

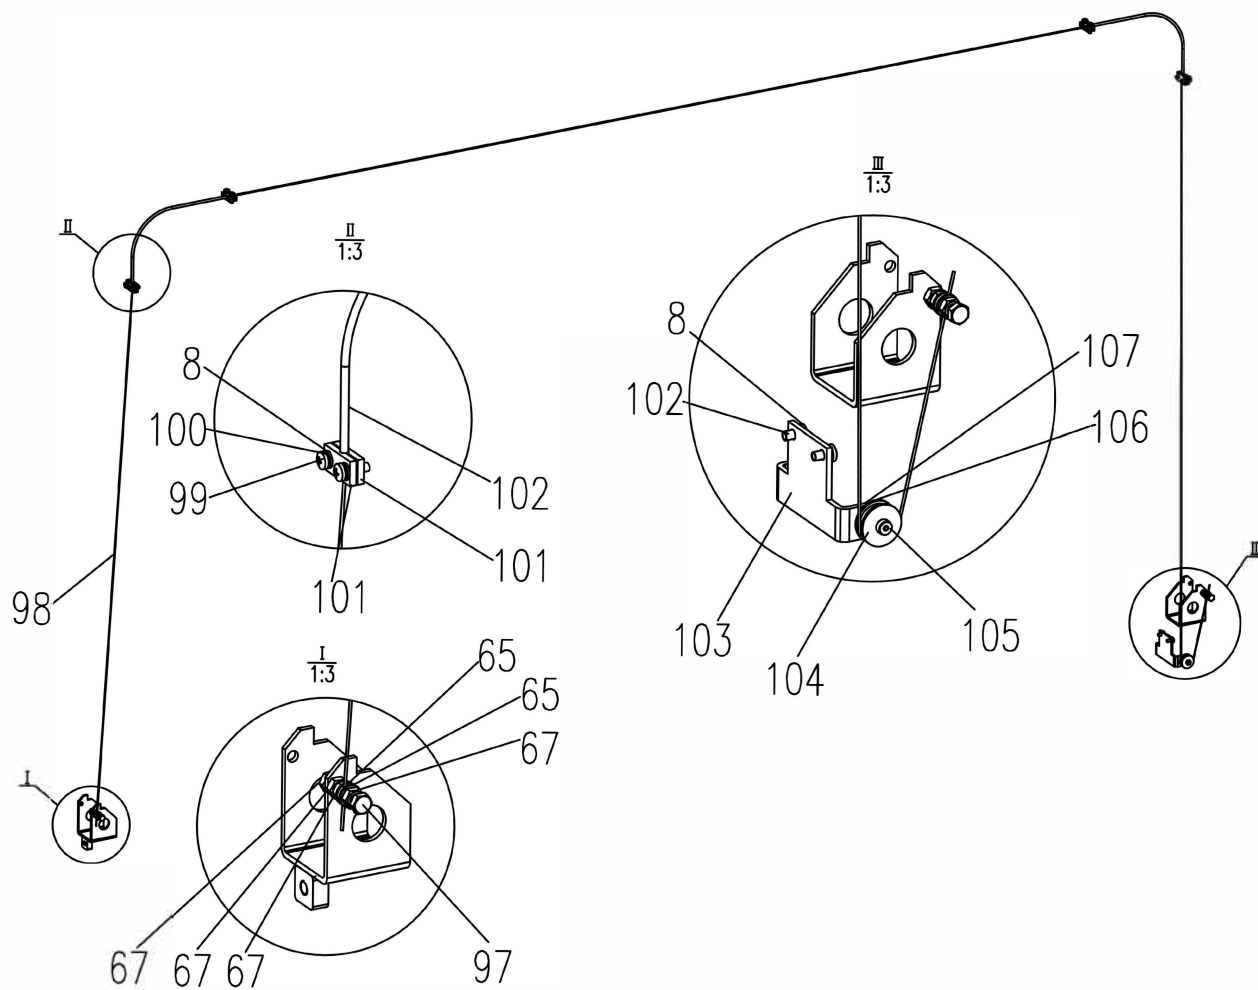

QJY260DP - GENERAL ASSEMBLY PARTS LIST

1	QJY260DP.9	Crossbeam	1	55	QJY260DP.9.2	inside the beam section parts	1
2	GB/T5783	HEX HEAD BOLT M12X35	20	56	QJY260D.9-01	connecting plate1	2
3	GB/T97.1	FLAT WASHER 12	31	57	QJY230DY.3-06	SAFETY TUBE BAR	1
4	GB/T93	SPRING WASHER 12	27	58	QJY230C-XW.1-05	SWITCH ME-8108	1
5	GB/T6170	NUT M12	27	59	QJY245DX.9-03	SOFT FOAM TUBE	1
6	GB/T894.1	EALSTIC PIN 6X40	6	60	QJY230DY.3-05	connecting plate	1
7	GB/T70.1	SOCKET HEAD CAP SCREW M6X10	48	61	GB/T5783	HEX HEAD BOLT M10X25	6
8	GB/T97.1	FLAT WASHER 6	58	62	GB/T93	SPRING WASHER 10	6
9	QJY260DP-E-01	HYDRAULIC HOSE COVER-1	2	63	GB/T97.1	FLAT WASHER 10	18
10	QJY260DP-E-03	HYDRAULIC HOSE COVER-3	2	64	GB/T5783	HEX HEAD BOLT M8X45	1
11	QJY260D-03	SAFETY COVER POWER SIDE	2	65	GB/T97.1	FLAT WASHER 8	5
12	QJY260DP-02	HYDRAULIC HOSE COVER	2	66	GB/T93	SPRING WASHER 8	5
13	QJY260DP.1	POWER POST ASSEMBLY	1	67	GB/6170	NUT M8	5
14	QJY260DP.2	NON-POWER POST ASSEMBLY	1	68	GB/T818	MACHINE SCREW SUNK HEAD M4X25	2
15	QJY260D.3	CARRIAGE ASSEMBLY	2	69	GB/T818	MACHINE SCREW SUNK HEAD M4X12	2
16	QJY260DP.4	ARM ASSEMBLY-L	4	70	QJY260D.9-02	CABLE WHEEL	4
17	QJY260D-06	ARM PIN	4	71	QJY260D.9-04	wire wheel axis	2
18	QJY260D-07	EXTENSION ADAPTER SHORT	4	72	QJY260D.9-03	wire wheel spacer	4
19	QJY260D-08	EXTENSION ADAPTER LONG	4	73	GB/T5783	HEX HEAD BOLT M10X35	12
20	1-56288A	BOLT M6	12	74	QJY260D.4-01	ARM TEETH BLOCK	4
21	QJY260DP.1.2	EXTENSION COLUMN	2	75	QJY260DP.4.1	BACK ARM WELDMENT	4
22	QJY260DP.1.1	POWER POST WELDMENT	1	76	GB/T2673	NUT BOLT M10X12	16
23	GB/T96	FLAT WASHER 12	16	77	QJY230C.4-02	ARM STOP	8
24	GB/T894.1	CIRCLIP25	12	78	QJY260DP.4.2	MIDDLE ARM WELDMENT	4
25	QJY260D.1-05	LOCK washer	4	79	GB/T859	washer 10	4
26	QJY260D.1-06	INSURANCE RING	4	80	QJY260DP.4.3	FRONT ARM WELDMENT	4
27	GB/T95	FLAT WASHER 24	4	81	GB/T70.1	SOCKET HEAD CAP SCREW M8X12	4
28	SF-2	BUSHING 2520	8	82	QJY230C.4.3b-04	ROUND LIFTING PAD	4
29	QJY260D.1-01	SAFETY LOCK	2	83	QJY230C.4.3b-01	LIFTING TRAY	4
30	QJY260D.1-03	SAFETY SPRING	2	84	QJY230C.4.3b-02	SWIVEL SHEATH	4
31	QJY260D.1.4	INSURANCE SHAFT PART	2	85	GB/T894.1	Circlip 22	4
32	QJY260D.1-02	INSURANCE	2	86	QJY230C.4.3b-05	LONG INSIDE SWIVEL SHEATH	4
33	GB/T6170	NUT M10	1	87	GB/T894.1	Circlip 50	12
34	QJY245DX-03	HANDLE	1	88	QJY260D.8-05	Cylinder	2
35	GB/T84141.11-84	HANDLE BALL M10X25	1	89	QJY260D.8-07	90° Fitting	2
36	GB/T819	MACHINE SCREW SUNK HEAD M6X10	2	90	QJY260D.8-06	Flow Restrictor	2
37	QJY260D.1.3	AXLE PARTS	2	91	GB/T5783	HEX HEAD BOLT M8X22	4
38	QJY260D.1-04	CABLE WHEEL	2	92	QJY260D.8-04	POWER UNIT	1
39	QJY260D.3.1	CARRIAGE WELDMENT	2	93	QJY260D.8-01	Hydraulic Hose 1050mm	1
40	QJY260D.3-03	SLIDER	8	94	QJY260D.8-02	Hydraulic Hose 270mm	1
41	GB/T818	NUT BOLT M4X10	4	95	QJY245DS.8-06	T-Fitting	1
42	QJY245DS.3-09	SQUARE TUBE COVER	2	96	QJY260DP.8-03	Hydraulic Hose 10050mm	1
43	QJY260D.3-01	RUBBER PAD	2	97	QJY245DX.10-02	M8X45 HHCS	2
44	GB/T70.1	SOCKET HEAD CAP SCREW M8X20	4	98	QJY260DP.6-01	Insurance of wire rope	1
45	QJY260D.3.2	CARRIAGE RESTRAINT PIN	4	99	GB/T818	MACHINE SCREW SUNK HEAD M6X20	8
46	QJY260D.3-02	TEETH BLOCK	4	100	GB/T93	SPRING WASHER 6	8
47	QJY260D.3-01	SPRING	4	101	QJY260D.6-01	TUBE CLAMP	8
48	QJY260D.3-04	BUSHING	4	102	GB/T818	MACHINE SCREW SUNK HEAD M6X12	2
49	QJY260DP-01	CABLE	2	103	QJY260D.6-03	Main pillar insurance wire rack	1
50	GB/T6170	NUT M16	8	104	QJY260D.6-04	wire wheel	1
51	GB/T5783	HEX HEAD BOLT M12X25	3	105	GB/T5281	Shoulder Screw 6.5X12	1
52	GB/T5783	HEX HEAD BOLT M12X30	4	106	GB/T93	SPRING WASHER 5	1
53	QJY260D.9.1	outside the beam section parts	1	107	GB/T6170	NUT M5	1
54	QJY230DY.3-04	switch limit Board	1	108	QJY260D-09	Support saddle rack	2

POWER UNIT (SEE DIAGRAM NEXT PAGE)

INDEX #	ITEM NUMBER	ITEM DESCRIPTION	QUANTITY
2001	YBZ-SLYX-12L-L-B	(1) TANK PLASTIC (BLACK)	1
2002	YBZ-E2D311/1-10	(2) SUCTION FILTER	1
	AM61-3HAM-3BA14R	(3) AC MOTOR 208-240V, UL 277V 25A 2.17CDR	
2003	LHRV-08-42	(4)RELIEF VALVE 2740PSI(+1-100PSI), FIXED	1
2004	YBZ-E2D311/1-02	(5) RELEASE VALVE	1
2005	YBZ-E2D31111-03	(6) CHECK VALVE	1
	YBZ-E2D311/1-05A	(7) BUFFER VALVE	N/A
	CBK-F2.1F	(8) GEAR PUMP	N/A
2006	BSB-MS1-A	(9) START BUTTON	1
2007	HLR6100-2ATNBCF	(10) RELAY	1
2008	LBZ-T1KK-1	(11) END HEAD	N/A
2009	YBZ3-EH1/1-04	(12) SEE INDEX #3 AND #4	1
NOT PICTURED			
2010	NOT LISTED	HONEYWELL SWITCH	1
2011	NOT LISTED	RELAY CONTROL BOX	1
2012	NOT LISTED	LEVER	1
2013	NOT LISTED	LEVER BALL	1