




Z360 Ride-on skid steer loaders

PARTS CATALOG

Table Of Contents

Dismantle The Whole Machine	1
Engine Assembly	3
Walking Assembly	4
Hydraulic Tank Assembly	5
Lift Plate Assembly	6
Upper Shroud Assembly	7
Hydraulic System Assembly	8
Battery Parts	9
Operator panel	10


Dismantle The Whole Machine

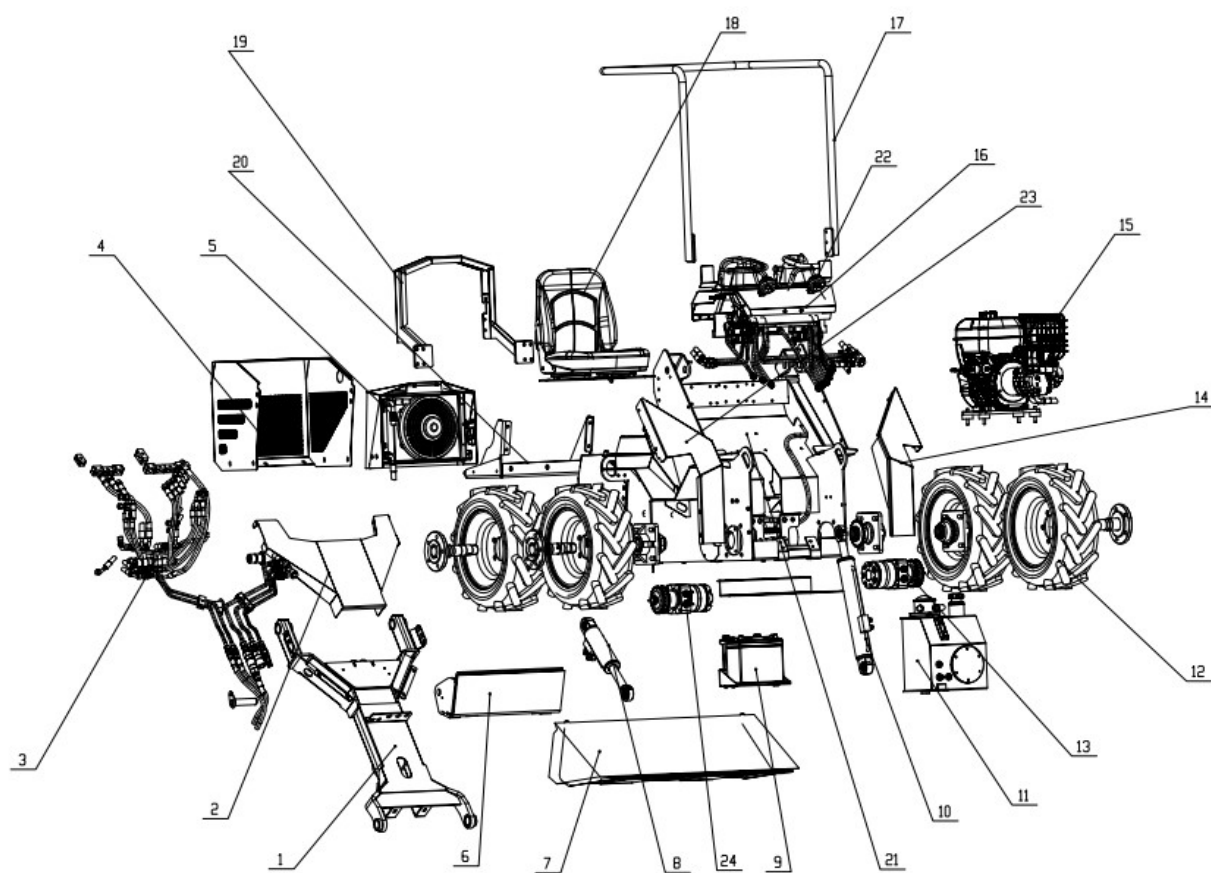

Dismantle The Whole Machine


No	Part No	零件名称	Description	Q' ty	Remark
1	5540100-09	举升臂总成	Lifting arm assembly	1	
2	5520125X01	上护罩总成	Upper shroud assembly	1	
3	5542300	液压系统	Hydraulic system assembly	1	
4	5540132	散热器挡板	Radiator baffle	1	
5	2850107	散热器	Radiator assembly	1	
6	5540125	举升板总成	Lift plate assembly	1	
7	2800104	铲料斗总成	Shovel hopper assembly	1	
8	5522101	铲斗油缸	Bucket cylinders	1	
9	5540100-07	电瓶总成	Battery assembly	1	
10	5522102	举升油缸	Lifting cylinders	1	
11	5540100-06	液压油箱总成	Hydraulic tank assembly	1	
12	5540100-01	行走系统总成	Walking assembly	1	
13	5540100-05	右驱动马达	Right drive motor	1	
14	5520107	左侧盖板	Left side cover	1	
15	5510100-01	发动机总成	Engine assembly	1	
16	5540100-11	控制面板总成	Operator panel assembly	1	
17	5520111	支架	bracket	1	
18	5540100-09	座椅总成	Seat assembly	1	
19	5540112	座椅架	Seat frames	1	
20	5540110	后托架	Rear bracket	1	
21	5540101	机架总成	Rack assembly	1	
22	5540121	工作灯	Work lights	2	
23	5520106	右侧盖板	Right side cover	1	
24	5540100-04	左驱动马达	Left drive motor	1	

Engine Assembly

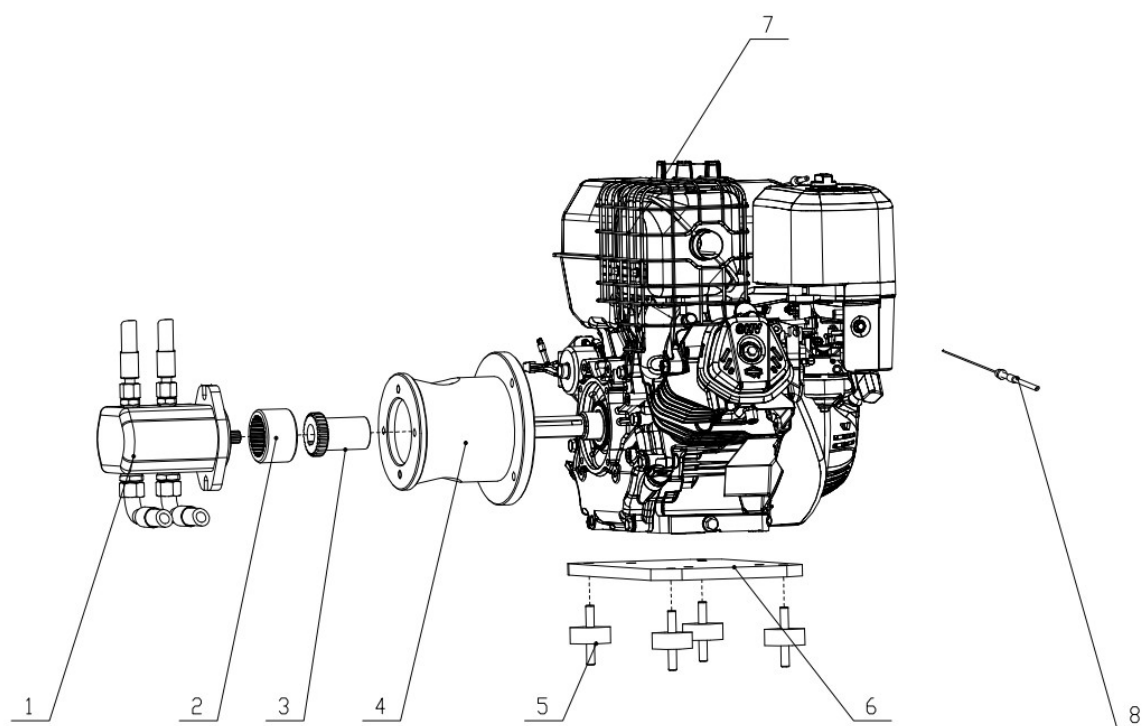


No	Part No	零件名称	Description	Q'ty	Remark
1	5510100-01-01	双联泵	Hydraulic pumps	1	
2	5510100-01-02	联轴器套	Coupling sleeve	1	
3	5510100-01-03	联轴器	Coupling	1	
4	5510100-01-04	泵座	Pump seat	1	
5	5510100-01-05	减震器总成	Shock absorber assembly	4	
6	5520124	发动机底板	Shock absorber flat pads	1	
7	5510100-01-06	发动机	Engine assembly	1	
8	5510100-01-07	油门线	Throttle line	1	

Walking Assembly

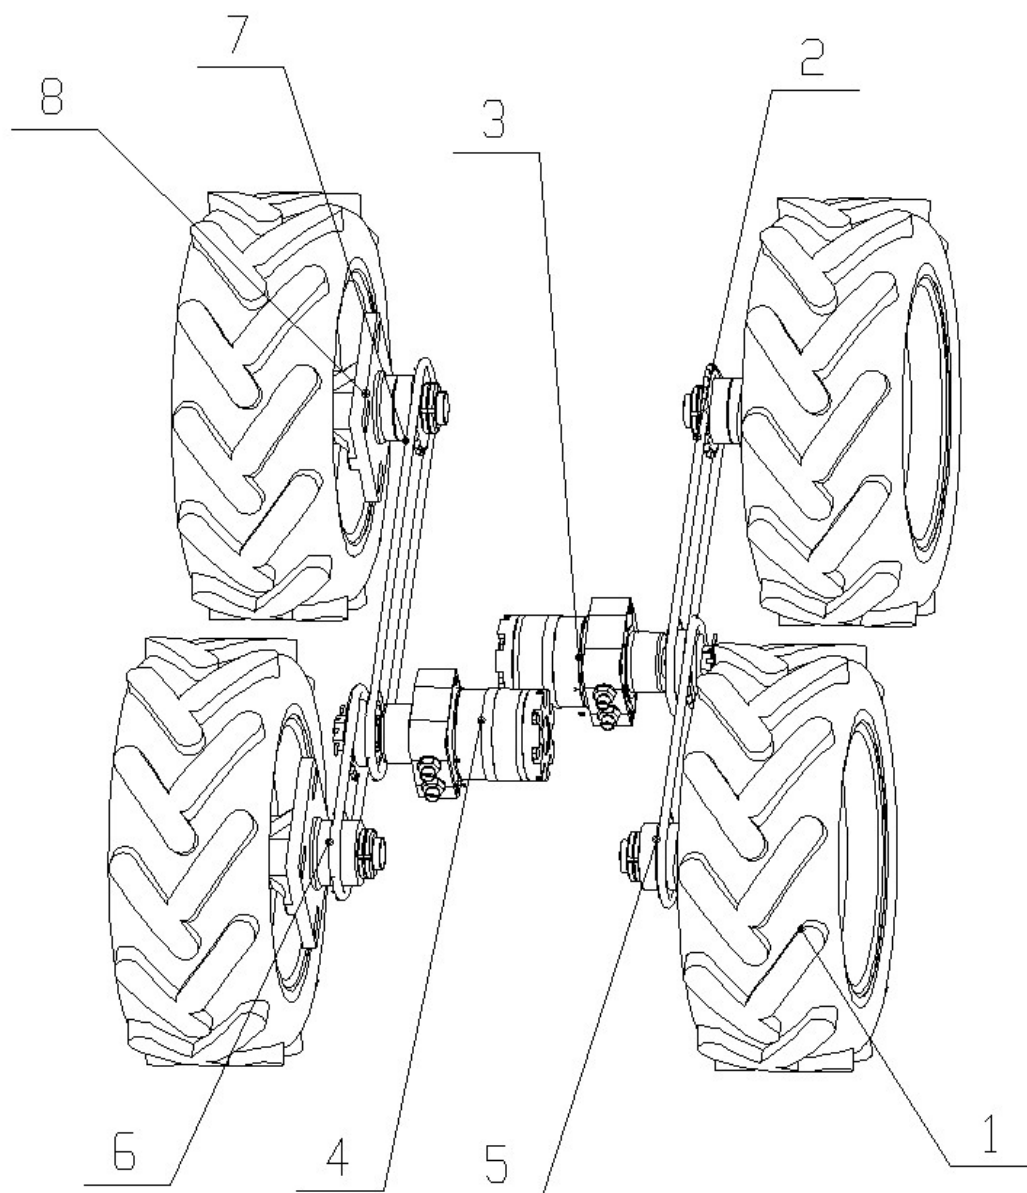


No	Part No	零件名称	Description	Q' ty	Remark
1	5540102	轮胎	tyre	4	
2	5540100-01-01	链条一	Chain one	1	
3	5540100-01-02	右驱动马达	Right drive motor	2	
4	5540100-01-03	左驱动马达	Left drive motor	1	
5	5540100-01-04	链条二	Chain two	1	
6	5540100-01-05	链条三	Chain three	1	
7	5540100-01-06	链条四	Chain four	1	
8	5540100-01-07	轮轴安装总成	Axle mounting assembly	4	

Hydraulic Tank Assembly

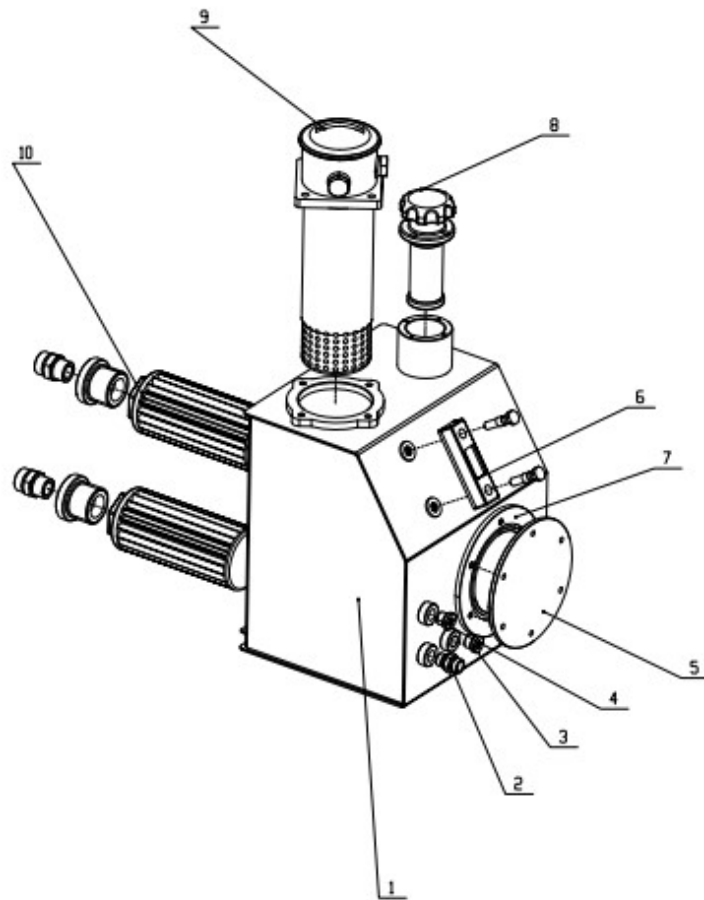


No	Part No	零件名称	Description	Q' ty	Remark
1	5540103	液压油箱	Hydraulic tanks	1	
2	5540100-06-01	液压连接件	Hydraulic connectors	1	
3	5540100-06-02	液压连接件	Hydraulic connectors	1	
4	5540100-06-03	液压连接件	Hydraulic connectors	1	
5	5540100-06-04	清洗盖板	Wash the cover	1	
6	5540100-06-05	油位计	Oil level gauge	1	
7	5540100-06-06	O 型圈	O-rings	1	
8	5540100-06-07	空气滤清器	Air filter	1	
9	5540100-06-08	回油滤清器	Return filter	1	
10	5540100-06-09	滤网	Strainer	2	

Lift Plate Assembly

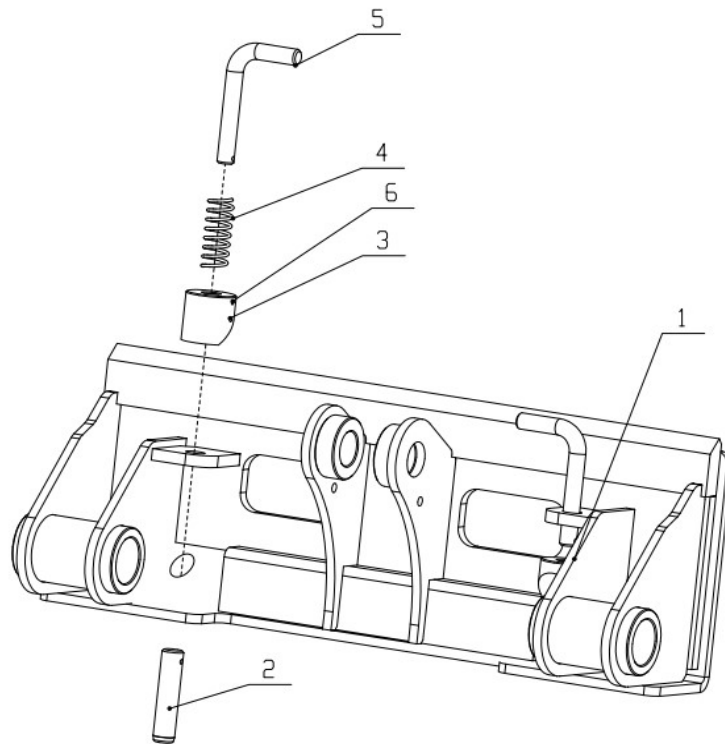

No	Part No	零件名称	Description	Q' ty	Remark
1	5540125	举升托板总成	Lifting support plate assembly	1	
2	2800100-03-01	铲斗销轴	Bucket pins	2	
3	2800100-03-02	销轴限位块	Pin limit block	2	
4	2800100-03-03	压缩弹簧	Compression springs	2	
5	2800100-03-04	提拉杆	Lift bars	2	
6	2800100-03-05	弹性圆柱销	Elastic cylindrical pins	4	∅ 4*35


Hydraulic System Assembly

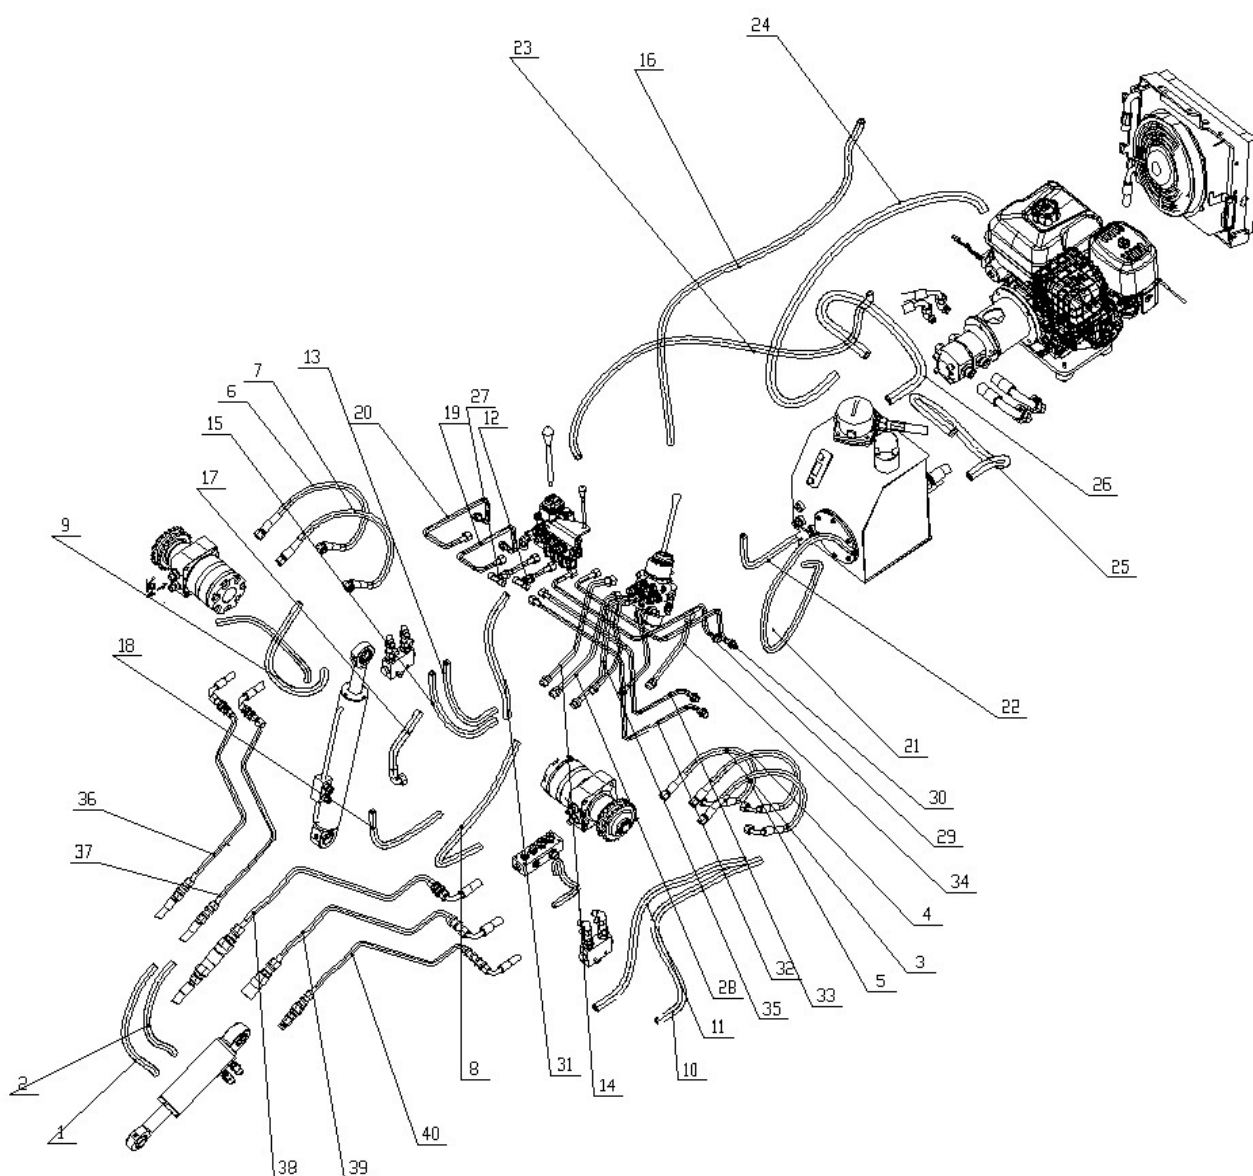

No	Part No	零件名称	Description	Q'ty	Remark
1	5542301	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18-525+护套
2	5542302	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18-505+护套
3	5542303	胶管总成	Hose assembly	1	2SN-DN12-M21593-08-22/M21593-08-22-595-V0+护套
4	5542304	胶管总成	Hose assembly	1	2SN-DN12-M21593-08-22/M21593-08-22 (H70) -550-V15° +护套
5	5542305	胶管总成	Hose assembly	1	1SN-DN10-M21593-06-18H70-M21593-06-18H70-630-V0° +护套
6	5542306	胶管总成	Hose assembly	1	2SN-DN12-M21593-08-22 (H=70) /M21513-08-22-620
7	5542307	胶管总成	Hose assembly	1	2SN-DN12-M21593-08-22/M21513-08-22-590
8	5542308	胶管总成	Hose assembly	1	1SN-DN10-M21513-06-18/M21593-06-18-490
9	5542309	胶管总成	Hose assembly	1	1SN-DN10-M21513-06-18/M21593-06-18-700
10	5542310	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21543-06-18-550
11	5542311	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21543-06-18-600
12	5542312	胶管总成	Hose assembly	1	2SN-DN12-M21513-08-22/M21593-08-22-690


13	5542313	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21543-06-18-500
14	5542314	胶管总成	Hose assembly	1	2SN-DN12-M21513-08-22/M21593-08-22-680
15	5542315	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18-370
16	5542316	胶管总成	Hose assembly	1	1SN-DN10-M21513-06-18/M21593-06-18-1200
17	5542317	胶管总成	Hose assembly	1	2SN-DN10-M21593-06-18/M21593-06-18-540-V0° +护皮
18	5542318	胶管总成	Hose assembly	1	2SN-DN10-M21593-06-18H70/M21593-06-18-510H70-620-V0° +护皮
19	5542319	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18H70-360
20	5542320	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18H70-320
21	5542320	胶管总成	Hose assembly	1	2SN-DN12-M21513-08-22/M21593-08-22-710
22	5542322	胶管总成	Hose assembly	1	2SN-DN12-M21513-08-22/M21543-08-22-910
23	5542323	胶管总成	Hose assembly	1	1SN-DN12-M21513-08-22/M21543-08-22-1450
24	5542324	胶管总成	Hose assembly	1	1SN-DN16-M21513-10-26/M21593-10-26-1500
25	5542325	胶管总成	Hose assembly	1	1SN-DN19-M21513-12-30/M21593-12-30-900
26	5542326	胶管总成	Hose assembly	1	1SN-DN19-M21513-12-30/M21593-12-30-930
27	5542327	胶管总成	Hose assembly	1	1SN-DN13-M20513-08-22/M20593-08-22-720
28	5542328	胶管总成	Hose assembly	1	1SN-DN13-M20513-08-22/M20593-08-22-880
29	5542329	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18H60-1040
30	5542330	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18H60-1060
31	5542331	胶管总成	Hose assembly	1	1SN-DN13-M21513-08-22/M21543-08-22-350
32	5542332	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18H60-540
33	5542333	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18H60-590
34	5542334	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18H60-610
35	5542335	胶管总成	Hose assembly	1	2SN-DN10-M21513-06-18/M21593-06-18-520
36	5520201	硬管一	Rigid tube one	1	
37	5520202	硬管二	Tube two	1	
38	5520203	硬管三	Tube three	1	
39	5520204	硬管四	Tube four	1	
40	5520205	硬管五	Tube Five	1	

Battery Parts

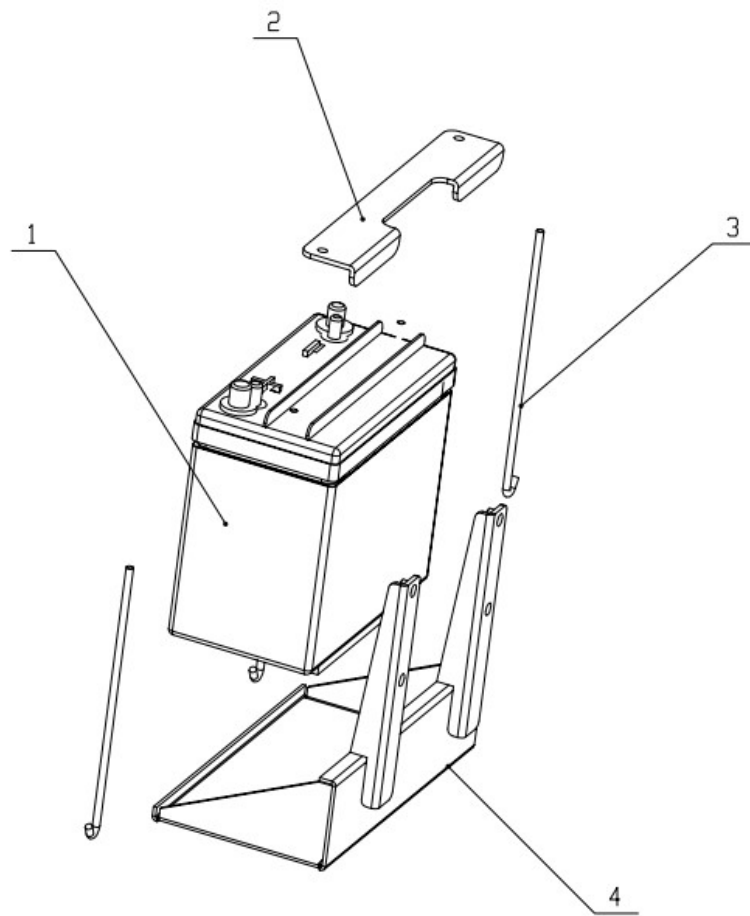

No	Part No	零件名称	Description	Q' ty	Remark
1	5540100-07-01	蓄电池	accumulator	1	
2	5540100-07-02	电瓶压板	Battery pressure plate	1	
3	5540100-07-03	电瓶挂钩	Battery hook	2	
4	5540100-07-04	蓄电池垫板	Battery pads	1	

Operator panel

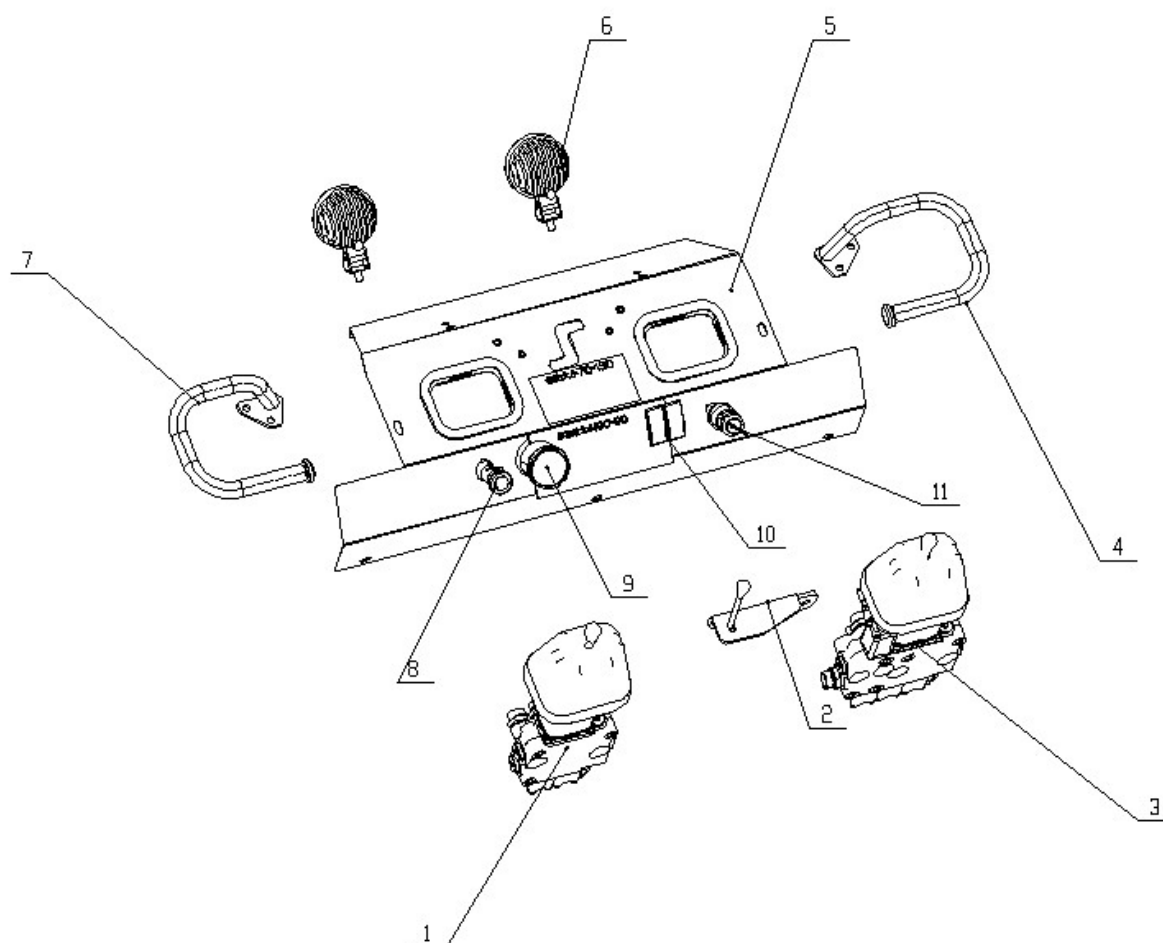

No	Part No	零件名称	Description	Q' ty	Remark
1	5510100-07	左操作控制阀	Left-operated control valve	1	
2	5510100-08	辅具操作控制阀	Auxiliary tool control lever	1	
3	5510100-09	右操作控制阀	Right-hand operated control valve	1	
5	5540126	右扶手总成	Right armrest assembly	1	
6	5540100-11	操作面板总成	Operator panel assembly	1	
7	5540100-11-01	工作灯	Work lights	2	
8	5540127	左扶手总成	Left armrest assembly	1	
9	5540100-11-02	点烟器	Cigarette lighter	1	
10	5540100-11-03	工作计时器	Working chronograph	1	
11	5540100-11-04	工作灯开关	Work light switch	1	
12	5540100-11-05	启动钥匙	Start key	1	